

CONTENTS

SAFETY	4	Selecting Measuring-Time	27
Introduction	4	Selecting Input settings	27
PRODUCT PRESENTATION	5	Totalize Start/Stop	27
INSTALLATION	7	Free-Run/Triggered.....	28
Unpacking	7	Service Request	28
Voltage-range selection	7	Status byte.....	29
Grounding	8	Output mode.....	29
Connecting external reference	8	Bus Learn	31
Installing options	8	Programming data out	31
Calibrating the MTCXO	8	What happens when I switch to local?	32
OPERATING INSTRUCTIONS	10	Summary of bus commands.....	32
Using the Timer/counter.....	10	Programming Examples	33
Battery unit	22	SPECIFICATIONS	37
Error codes	22	Measuring functions	37
GPIB-INTERFACE OPERATION.....	23	Input specifications	38
Introduction	23	Auxiliary functions.....	39
What can I do using the bus?	23	Definitions.....	39
Connecting the controller	24	General information	40
Giving the counter an address	24	Optional accessories	41
Checking the communication.....	24	Ordering information	42
Two ways of programming	25	APPENDIX	43
Syntax.....	25	Checking the sensitivity of counters	44
Selecting output separator	26	INDEX.....	45
How to select function.....	26		



DECLARATION OF CONFORMITY
for

FLUKE
Timer / Counter
PM 6666

Fluke Industrial B.V.
Lelyweg 1
7602 EA Almelo
The Netherlands

Statement of Conformity

Based on test results using appropriate standards, the product is in conformity with
Electromagnetic Compatibility Directive 89/336/EEC
Low Voltage Directive 73/23/EEC

Sample tests

Standards used:

IEC 348 (1978)
Safety Requirements for Electronic Measuring Apparatus

EN 50081-1 (1992)
Electromagnetic Compatibility Generic Emission Standard:
EN55011

EN 50082-1 (1992)
Electromagnetic Compatibility Generic Immunity Standard:
IEC801-2, -3, -4

The tests have been performed in a typical configuration.

This Conformity is indicated by the symbol **CE**, i.e. "Conformité européenne".

DMB70-08-95206

Guarantee Statement

This Fluke guarantee is in addition to all rights which the buyer may have against his supplier under the sales agreement between the buyer and the supplier and according to local legislation.

Fluke guarantees this product to be free from defects in material and workmanship under normal use and service for a period of one (1) year from the date of shipment. This guarantee does not cover possible required re-calibration and/or standard maintenance actions. This guarantee extends only to the original end purchaser and does not apply to fuses, batteries or to any product or part thereof that has been misused, altered, or has been subjected to abnormal conditions of operation and handling.

Fluke-supplied software is guaranteed to be properly recorded on non-defective media. We will replace improperly recorded media without charge for 90 days after shipment upon receipt of the software. Our software is not guaranteed to be error free.

Fluke's obligation under this guarantee is limited to have repaired or replace a product that is returned to an authorized Fluke Service Center within the guarantee period, provided that Fluke determines that the product is defective and that the failure has not been caused by misuse, alteration or abnormal operation.

Guarantee service for products installed by Fluke will be performed at the Buyer's facility at no charge within Fluke's service travel area; outside this area guarantee service will be performed at the Buyer's facility only upon Fluke prior agreement and the Buyer shall pay Fluke round trip travel expenses.

If a failure occurs, send the product, freight prepaid, to the Service Center designated by Fluke with a description of the difficulty. At Fluke's option, repairs will be made or the product replaced. Fluke shall return the product, F.O.B. Repair Center, transportation prepaid, unless the product is to be returned to another country, in which case the Buyer shall pay all shipping charges, duties, and taxes. Fluke assume NO risk for damage in transit.

Disclaimer

The foregoing guarantee is exclusive and is in lieu of all other guarantees, expressed or implied, including but not limited to any implied guarantee of merchantability, fitness, or adequacy for any particular purpose or use. We shall not be liable for any direct, indirect, special incidental, or consequential damages, whether based on contract, tort, or otherwise.

SAFETY

Introduction

Read this page carefully before you install and use the PM 6666 Timer/Counter.

This Timer/Counter has been designed and tested in accordance with IEC publication 1010-1, and CSA 22.2 No.231, and has been supplied in a safe condition. The user of this instrument must have the required knowledge of PM 6666. This knowledge can be gained by thoroughly studying this manual.

Safety Precautions

Use generally-accepted safety procedures, in addition to the safety precautions stated in this manual, to ensure personal safety and safe operation of the Timer/Counter.

Caution & Warning Statements

You will find specific warning and caution statements, where necessary throughout the manual. Do not carry out repairs or adjustments to the Timer/Counter without reading the Service Manual, which contains the relevant warnings for such activities.

CAUTION: Indicates where incorrect operating procedures can cause damage to, or destruction of, equipment or other property.

WARNING: Indicates a potential danger that requires correct procedures or practices in order to prevent personal injury.

Symbols



Indicates where the protective ground lead is connected inside the instrument. Never unscrew or loosen this screw.



Signal Ground symbol. This symbol indicates that the signal ground of the connectors are internally connected to the other connectors with the same symbol, and to parts that are easily accessible for the user.

Warning: All the metallic BNC's will carry the same voltage. Applying signals with a common potential of more than 30Vrms (42Vpk or 60Vdc) above ground potential will make the instrument dangerous.



Indicates that the operator should consult the manual.

Such symbols are printed near the input connectors. This symbol on the instrument should encourage the user to use the correct procedure for common instrument ground, and maximum input voltages, as described in the Installation Chapter, Specification, and Battery Unit description.

If in Doubt About Safety

Whenever you suspect that it is unsafe to use the instrument, you must make it inoperative, clearly mark it to prevent its further operation, and inform the Fluke servicing department.

E.g. The instrument is likely to be unsafe if it is visibly damaged.

PRODUCT PRESENTATION

General

The PM 6666 is a compact, high resolution, reciprocal Timer/Counter which performs many functions. A number of options are available i.e. HF-input, GPIB-interface, high stability oscillator and rechargeable battery for field use.

A rack-mount kit and a carrying case are also available as accessories.

Rear View

- S) Rear feet.
- T) Screws for removing the cover.
- U) External-reference-input, BNC connector.
- V) Voltage-range selector.
- W) Power-inlet socket.
- X) GPIB interface-connector (optional).
- Y) GPIB address-selector (option).

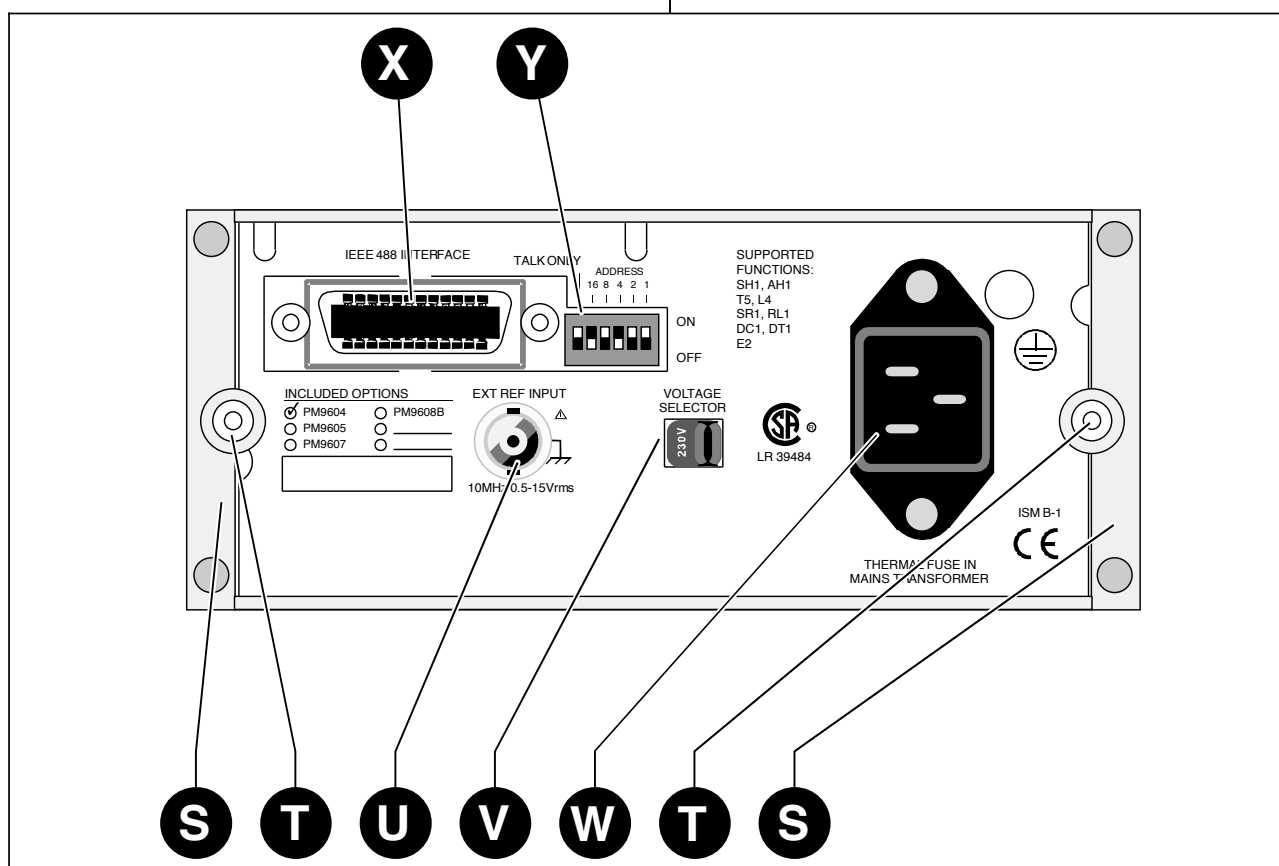


Figure 1 Rear View.

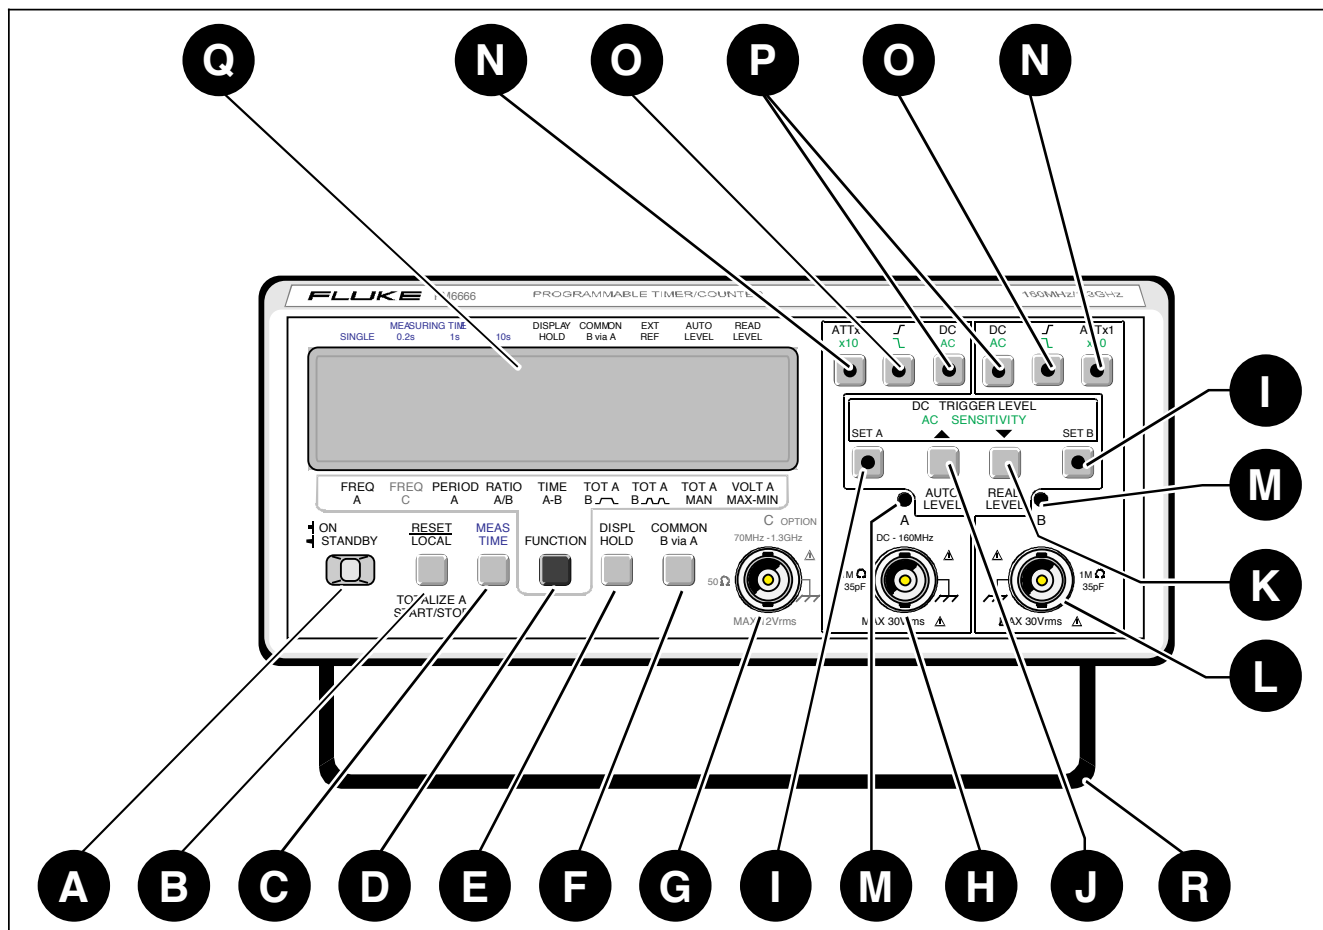


Figure 2 Front View

Front View

- A) Power switch.
- B) Reset button, doubles as Local button if the Timer/Counter is equipped with an GPIB interface. Starts and stops counting if the TOT A MAN function is selected.
- C) Measuring-time selector-button. *
- D) Function-selector button. *
- E) Display-hold button. Freezes the display.
- F) COM B via A button connects the signal on input A to input B. The Input-A attenuator and AC/DC switch affect both inputs.
- G) Input-C BNC-connector (optional).
- H) Input-A BNC-connector.
- I) Set value button, depress to set sensitivity (AC) or trigger level (DC).

- J) Auto level, starts automatic trigger level setting. If 'Set Value' is selected, this button is used to increase the value.
- K) Read level, displays trigger levels. If 'Set Value' is depressed, this button is used to decrease the value.
- L) Input-B BNC-connector.
- M) Trigger indicators.
- N) Attenuator buttons.
- O) Slope selection buttons.
- P) DC or AC coupling selection buttons.
- Q) Large LCD-display.
- R) Tilting support.

*The selected function is indicated on the display. A short press on the button moves the cursor one step to the right. A long press makes the cursor scroll.

INSTALLATION

Unpacking

If the Timer/Counter is cold, leave it in the cardboard box until it has reached normal room temperature.

- Lift the Timer/Counter out of the box.
- Remove the polystyrene supports.
- Unpack the Timer/Counter from the plastic bag.
- Reverse the procedure to pack.

Check List

Has the Timer/Counter been damaged in transport? If it has, file a claim with the carrier immediately, and notify the Fluke sales & service organization to make repair or replacement of the instrument easier.

- Check that the package contains the following items in addition to the Timer/Counter:
- This Operators' Manual
- A power cable with protective earth conductor
- A Battery unit if ordered *)
- An MTCXO oscillator if ordered *)
- A GPIB interface if ordered *)
- An HF-input if ordered *)

*) Labels on the rear panel indicate which options are fitted in your Timer/Counter.

INCLUDED OPTIONS			
<input checked="" type="checkbox"/>	PM 9604	<input type="checkbox"/>	PM 9608B
<input type="checkbox"/>	PM 9605	<input type="checkbox"/>	_____
<input type="checkbox"/>	PM 9607	<input type="checkbox"/>	_____

Figure 3 Options Label on Rear

Voltage Range Selection

Set the Timer/Counter to the local line voltage before connecting it. As delivered the Timer/Counter may be set to either 115 V or 230 V. The setting is indicated on the voltage range selector on the rear panel.

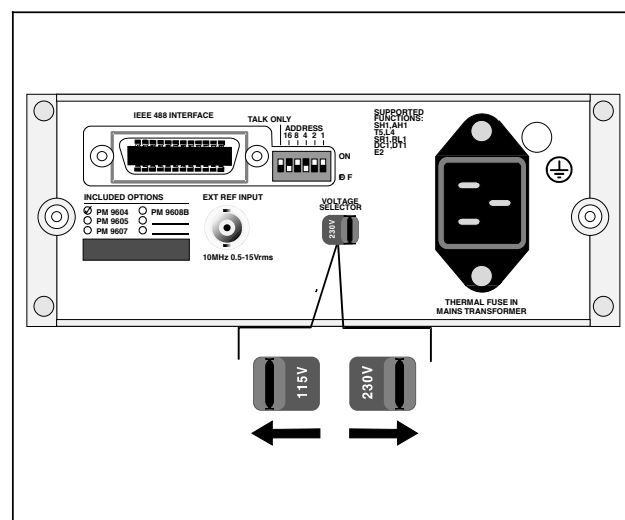


Figure 4 Location of Voltage Range Selector.

If the voltage range setting is incorrect, set the selector in accordance with the local voltage before connecting the power cable to the line.

Grounding

The Timer/Counter is connected to ground via a sealed three-core power cable, which must be plugged into a socket outlet with a protective ground terminal. No other grounding is permitted for this Timer/Counter. Extension cables must always have a protective ground conductor.

WARNING: Never interrupt the protective grounding intentionally. Any interruption of the protective ground connection inside or outside the instrument, or disconnection of the protective ground terminal is likely to make the instrument dangerous.

Connecting External Reference

If you wish to use an external 10 MHz reference frequency source, connect it via a BNC-cable to the EXT REF INPUT on the rear panel of the Timer/Counter.

When the Timer/Counter starts measuring, it automatically detects the external reference and begins to use it. The EXT REF indicator on the display is switched on.

Installing Options

Introduction

The options ordered at the same time as the Timer/Counter are normally factory-installed. Other options can be fitted when needed.

The options fit inside the Timer/Counter, but not all at the same time: The HF-input, the high stability-oscillator and either of the GPIB-interface or the Battery-unit can be installed in one and the same Timer/Counter.

Calibrating the MTCXO

The MTCXO Time-base can easily be recalibrated to any 10 MHz reference. To maintain the accuracy of the MTCXO, use a reference with an accuracy of $3 \cdot 10^{-8}$.

The PM 9691 oven-enclosed oscillator used in Fluke counters version /.5. meet this requirement, if calibrated.

Preparations

If you remove the cover when counter has been switched on, the temperature of the MTCXO will rapidly drop about 10°C. Since the MTCXO must have a stable temperature when calibrated you must wait an hour between removing the cover and calibrating.

If the counter has been switched off more than three hours, you can calibrate it directly.

Removing the Cover

WARNING: When you remove the cover you will expose live parts and accessible terminals which can be dangerous to life.

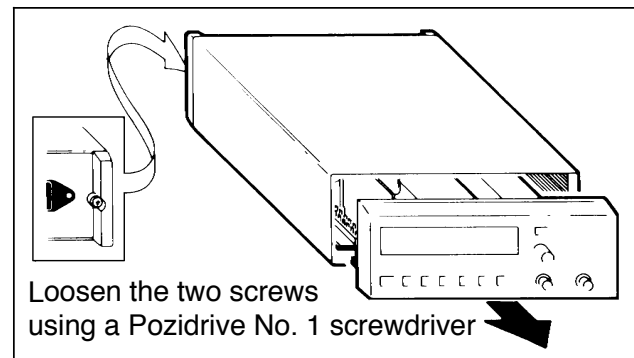


Figure 5 Loosen These Screws to Remove Cover.

- Make sure that the power cable is disconnected.

WARNING: Although the power switch is in the off position, the line voltage is present on the printed circuit board.

- Loosen the two screws in the rear feet.
- Grip around the front panel and gently pull the Timer/Counter out of the cover.

Calibration Procedure

- Remove the cover from the counter.
- Allow the MTCXO to adapt the new ambient temperature. (See 'Preparations'.)
- Connect the 10 MHz reference to Input-A.
- Switch ON the counter.
- Adjust the sensitivity control so that the counter counts properly.
- Hold down the CALIB-button, on the main printed-circuit board in the counter, and press the Reset-button.

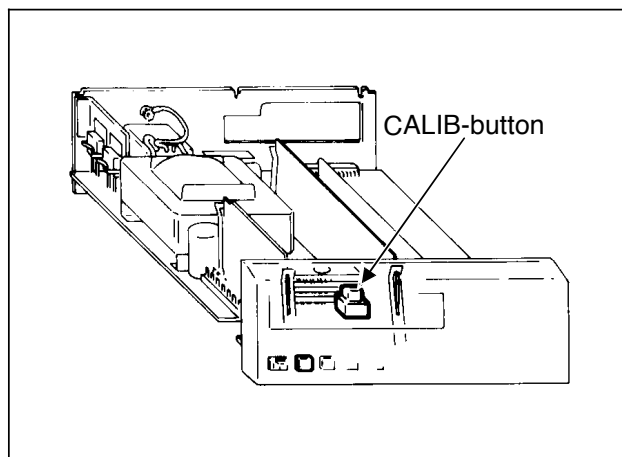

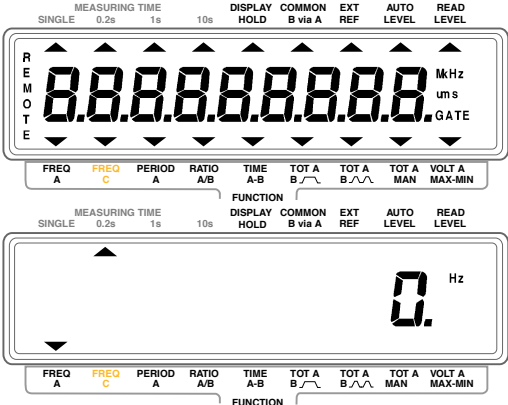

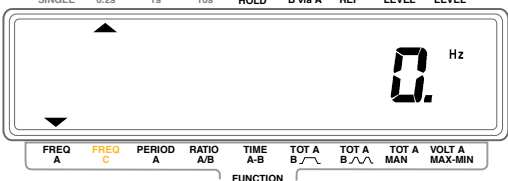

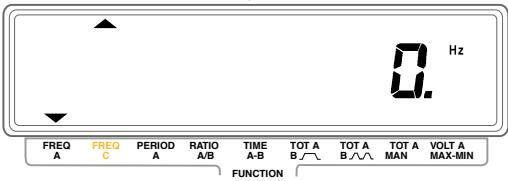


Figure 6 Location of the CALIB-Button.

- Wait about 20 seconds, until the display shows 10.000000 MHz. Now the oscillator is calibrated.
- Switch OFF the counter and disconnect the 10 MHz reference.
- Fit the cover.

OPERATING INSTRUCTIONS

Using the Timer/Counter

CONTROL	OPERATING THE CONTROL	DISPLAY	GPIB-CODE
<div><div>■ ON</div><div>■ STAND-BY</div><div></div></div>	<p>POWER, a two-position mechanical push-button. Depressed = ON, Released = OFF</p>	<div></div>	<p>No control possible but D gives the same settings as after power-ON.</p>
<div><div>FUNCTION</div><div></div></div>	<p>A short depression of the FUNCTION button moves the cursor in the lower edge of the display one step to the right. If the button is held depressed, the cursor will scroll to the right until released. When the cursor reaches the rightmost position it jumps back to the leftmost position and continues from there.</p>	<div></div>	<p>One code for each function, - see below:</p>
<div><div>FUNCTION</div><div></div></div>	<p>Move function cursor to FREQ A</p>	<div></div>	<p>FREQ A (FREQ B possible via Bus)</p>

FUNCTION AND RANGE**HINTS AND COMMENTS**

Switches the power ON and OFF. When switched on, the built in microprocessor switches on all segments of the display then it runs a power-up test, checking the measuring logic of the Timer/Counter before the counter starts working. This test takes about 2 seconds.

If an error is found, an error code will be displayed. Try switching the Timer/Counter off and on again. If error code 01 - 03 persists, call Fluke service. Look on the last page in this manual for Phone No. and address.

WARNING: The power switch operates on the secondary side of the transformer. The power cable must be disconnected from the line outlet socket if it is necessary to completely isolate the Timer/Counter from the line.

Error 01 = RAM memory error
Error 02 = Measuring logic error
Error 03 = Internal bus error
Error OF = Overflow in the counting registers

Selects one of the nine measuring functions available.

The cursor does not stop at **FREQ C** if no Input-C HF-input is installed.


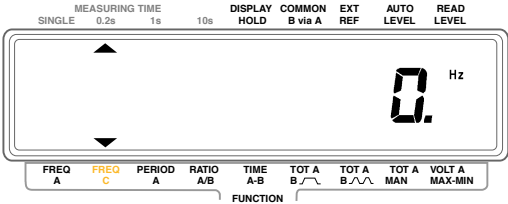

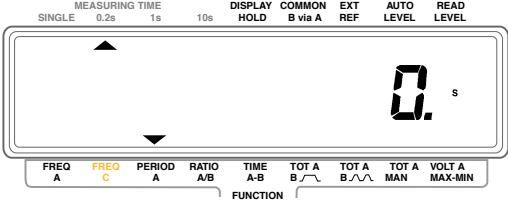

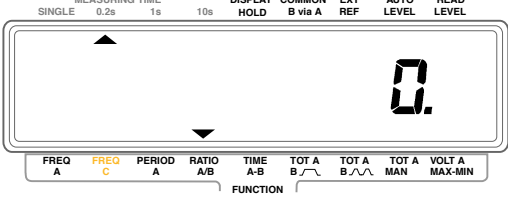

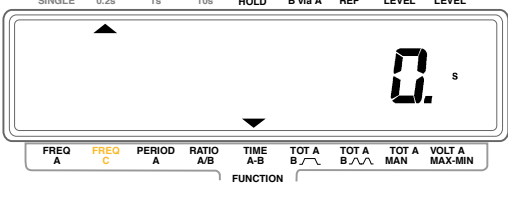







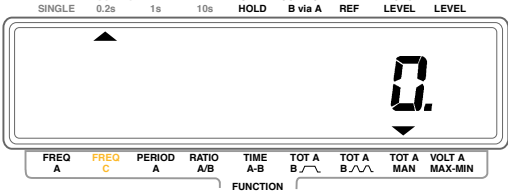
Reciprocal frequency measurement of the signal at Input-A.

Range:

0.1 Hz to 16 MHz (SINGLE measuring-time)

1 Hz to 160 MHz (0.2, 1, and 10 s measuring-time)

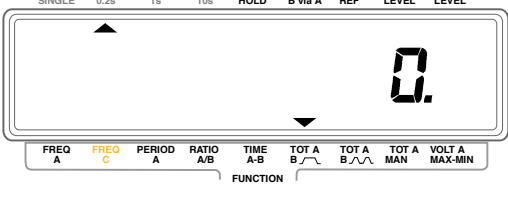If the signal is sine shaped and the input AC coupled, the minimum input frequency is 20 Hz (at specified sensitivity).

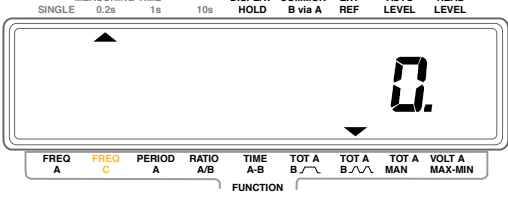CONTROL	OPERATING THE CONTROL	DISPLAY	GPIB-CODE
<div><div>FUNCTION</div><div></div></div>	Move function cursor to FREQ C		FREQ C
<div><div>FUNCTION</div><div></div></div>	Move function cursor to PER A		PER A
<div><div>FUNCTION</div><div></div></div>	Move function cursor to RATIO A/B		RATIO A,B (RATIO B,A RATIO C/A and RATIO C/B also possible via bus)
<div><div>FUNCTION</div><div></div></div>	Move function cursor to TIME A-B		TIME A,B (TIME B,A also possible via bus)
<div><div>FUNCTION</div><div></div></div>	Move function cursor to TOT A  B		TOTG A,B (TOTG B,A also possible via bus)
<div><div>FUNCTION</div><div></div></div>	Move function cursor to TOT A  B		TOTS A,B (TOTS B,A also possible via bus)
<div><div>FUNCTION</div><div></div></div>	Move function cursor to TOT A MAN		TOTM A (TOTM B also possible via Bus)

FUNCTION AND RANGE

HINTS AND COMMENTS

Reciprocal frequency measurement of the signal at Input-C.

The cursor does not stop at **FREQ C** if no Input-C HF-input is installed.

Range:

70 to 1300 MHz (PM 9608B)

When you select **SINGLE**, the Timer/Counter measures one period, the range is: 100 ns to 200 000 000 s (about 6 years and four months!).

Use **SINGLE** when the input frequency is low. This shortens the measuring time considerably since one cycle is measured instead of 10.

When you select 0.2, 1, and 10 s Measuring-time, the Timer/Counter divides the input frequency by 10 and measures the average period for the No. of cycles in that time.

Range:

8 ns to 1 s.

The number of pulses at Input-A and the number of pulses at Input-B are fed into one register each. When the set Measuring-time has elapsed, register A is divided by register B.

The signal with the lowest frequency must always be connected to Input-B.

Range:

$1 \cdot 10^{-7}$ to $1.2 \cdot 10^9$

The Timer/Counter measures the time between a positive slope on Input-A and a positive slope on Input-B (default).

Use the **SLOPE** buttons if you wish to measure between any other combination of slopes.

Range:

100 ns to $2 \cdot 10^8$ s (**SINGLE**)

0 ns to 20 s (average, the signal must be asynchronous with the time base)

The Timer/Counter counts the total number of pulses fed to Input-A. The positive slope of the Input-B signal starts the totalizing, and the negative slope stops it. This is always a **SINGLE** measurement.

k on the display indicates kilo-pulses (1000) and **M** indicates Mega-pulses (1 000 000).

Range:

0 to $1 \cdot 10^{15}$ pulses.

Use the Input-B **SLOPE** button if you wish to measure during a negative pulse on Input-B

The Timer/Counter counts the total number of pulses fed to Input-A. The positive slope of the first pulse on Input-B starts the totalizing, and the positive slope of the next pulse stops it. This is always a **SINGLE** measurement.

k on the display indicates kilo-pulses (1000) and **M** indicates Mega-pulses (1 000 000).

Range:

0 to $1 \cdot 10^{15}$ pulses.

Use the Input-B **SLOPE** button if you wish to measure between two consecutive negative pulses on Input-B.


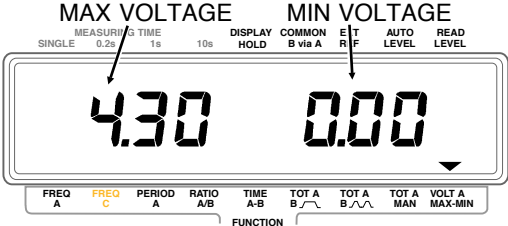




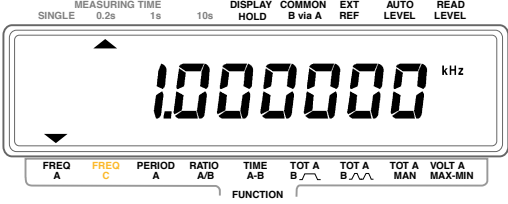

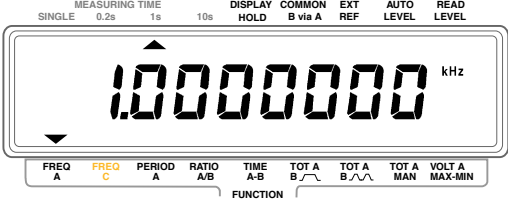

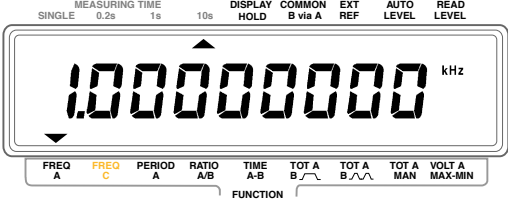
The Timer/Counter counts the total number of pulses fed to Input-A. You start and stop the totalizing with the **TOTALIZE START/STOP** button (**RESET/LOCAL**). If you keep this button depressed for more than one second, the total sum will be reset.

k on the display indicates kilo-pulses (1000) and **M** indicates Mega-pulses (1 000 000).

Range:

0 to $1 \cdot 10^{15}$ pulses

The Measuring-time indicator is switched off in **TOT A MAN**.

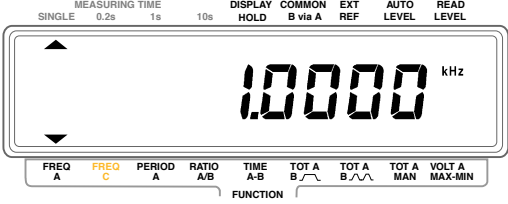CONTROL	OPERATING THE CONTROL	DISPLAY	GPIB-CODE
<div><div>FUNCTION</div><div></div></div>	Move function cursor to VOLT A MAX-MIN		VMAX A, VMIN A (VMAX B and VMIN B possible via Bus)
<div><div>MEAS TIME</div><div></div></div>	MEAS TIME is operated in the same way as the functions control, see page 8.		MTIME <num> where <num> is the time in seconds. <i>Range:</i> 10 ms to 10 s. 0 = Single
<div><div>MEAS TIME</div><div></div></div>	Move the measuring-time cursor to SINGLE		MTIME 0
<div><div>MEAS TIME</div><div></div></div>	Move the measuring-time cursor to 0.2 s		MTIME 0.2
<div><div>MEAS TIME</div><div></div></div>	Move the measuring-time cursor to 1 s		MTIME 1
<div><div>MEAS TIME</div><div></div></div>	Move the measuring - time cursor to 10 s		MTIME 10

FUNCTION AND RANGE

HINTS AND COMMENTS



The timer counter will measure the positive and negative peak voltage and display them as voltage relative to 0 V.
Range: -51 V to +51 V.

The attenuator will switch in and out automatically when needed during voltage measurements regardless if AUTO LEVEL is selected or not.

The set Measuring-time controls the time during which the main gate is opened, allowing pulses to enter the counting logic. A longer Measuring-time gives higher resolution readouts with more digits displayed.

If you wish to do one measurement instead of repetitive measurements, see DISPL HOLD.

The time the gate is open is not exactly the preset Measuring-time, because the Timer/Counter synchronizes the measurement with the input signal in order to measure complete periods. If the period of the input signal is longer than the set Measuring-time, the main gate does not close again until the period is completed.

When TOT A  B or TOT A  B is selected, the Measuring-time setting will be used to set the display time.

For PER A and TIME A-B exactly one period or one time interval is measured. The minimum result possible is 100 ns.

The input frequency is limited to 16 MHz for FREQ A and PER A.

The display time will be 100 ms.

If external reference is used, the EXT REF indicator will not be switched-on until after the first measurement.

When set to SINGLE and FREQ A, the Measuring-time is one cycle of the input signal or 3 ms, whichever is longest. When set to SINGLE and FREQ C, the Measuring-time is 3 ms.

A Frequency-A measurement will result in 6 to 7 digits on the display.

A Frequency-A measurement will result in 7 to 8 digits on the display.

A Frequency-A measurement will result in 8 to 9 digits on the display.


CONTROL

OPERATING THE CONTROL

DISPLAY

GPIB-CODE


RESET
LOCAL



TOTALIZE A
START/STOP

RESET/LOCAL, a short press is enough for Reset. When the remote indicator is on, a press will cause the counter to switch back to LOCAL, i.e. control from the front panel.


TOTALIZE START/STOP, one press starts totalizing, the next press stops.

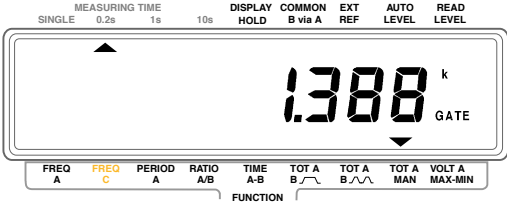


X starts a new measurement.

GATE OPEN starts and **GATE CLOSE** stops Totalize MAN.


DISPL
HOLD




Switches 'on' or 'off' **DISPL HOLD** when depressed.

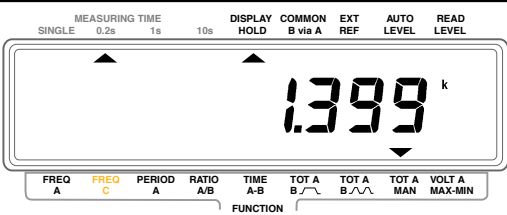

Not bus controllable, but Free-run OFF will give a similar function; See GPIB-bus operation.

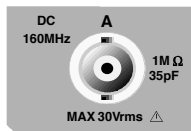

Connect the signal to **INPUT-A** via a BNC-cable.

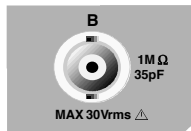

Connect the signal to **INPUT-B** via a BNC-cable.

FUNCTION AND RANGE

HINTS AND COMMENTS

When reset is depressed, the display and counting registers are cleared. When reset is released, a new measurement is started. The Measuring-time-, Function- and display hold-settings are not affected.

When the counter is controlled from the GPIB-Bus, the LOCAL button can be disabled via the 'Local Lock out' command.

If the TOT A MAN function is selected, the RESET/LOCAL button functions as a START/STOP button. One press starts the counting and the next press stops it. A long depression results in reset.

Display hold freezes the display, but not until the measurement in process has been finished. A new measurement can always be initiated via the RESET button.

Use this input for all functions except **FREQ C**.

Input data:*Range:*

DC Hz to 160 MHz

Impedance:

1 M Ω //35 pF.

Min. pulse duration:

4 ns

At higher frequencies; use a 50 Ω termination type PM 9585 to avoid interference caused by impedance mismatch.

The illustration below shows which function block each of the input controls affect.








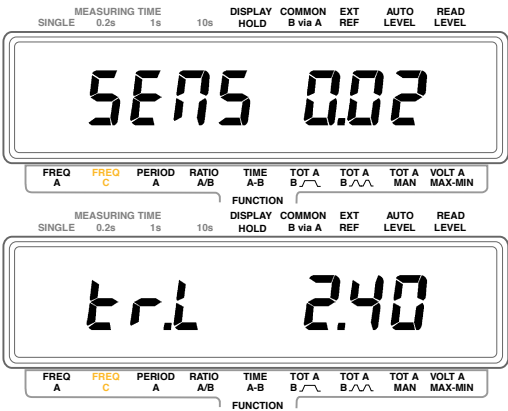


Figure 7 Input Circuit Block Diagram.

This input is used for Ratio A/B, Time A-B and TOT A start/stop (or gated) by B measurements.

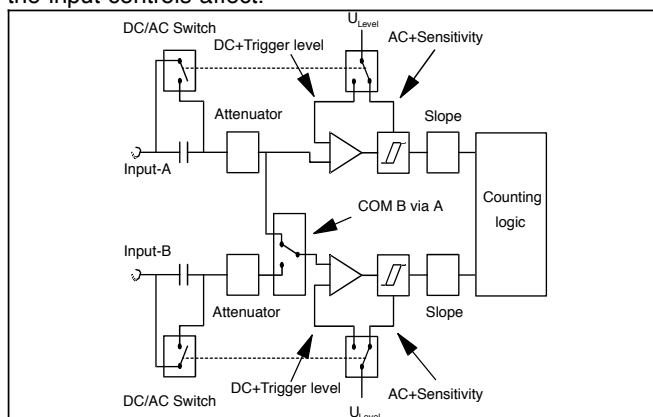Range: Identical to Input-A

CONTROL	OPERATING THE CONTROL	DISPLAY	PIB-CODE
<div>ATTx1 x10</div> <div></div>	One ATTx1/x10 push button for each of input A and B. Switch the indicator ON to select 10 times attenuation and OFF to switch off the attenuator.		ATT ON ATT OFF You must first select input with INPA or INPB.
<div></div>	One SLOPE push-button for each of input A and B. Switch the indicator ON to select negative slope, and OFF to select positive slope.		TRGSLP POS TRGSLP NEG You must first select input with INPA or INPB.
<div>DC AC</div> <div></div>	One DC/AC push-button for each of input A and B. Switch the indicator ON to select AC and OFF to select DC. NOTE: Sensitivity can be set when AC-coupled and Trigger Level when DC-coupled.		COUPL AC COUPL DC You must first select input with INPA or INPB.
<div></div> <div>AUTO LEVEL</div>	A depression switches the AUTO LEVEL indicator on or off.	<div></div>	AUTO ON AUTO OFF
<div>SET A</div> <div></div>	Depress the SET VALUE button once and the indicator in the button switches on. Now the auto level and Read level buttons have the red arrow up and down function. Another press will switch off the function. NOTE: Sensitivity can be set when AC-coupled and Trigger Level when DC-coupled.	<div></div>	Separate Codes for trigger level and sensitivity SENS1 =20 mV SENS2 =50 mV SENS3 =100mV TRGLVL <num> <num> = -5.1 to +5.1 V. You must first select input with INPA or INPB.

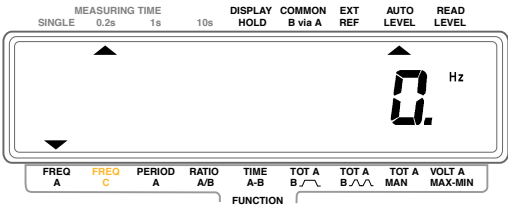FUNCTION AND RANGE

HINTS AND COMMENTS

When the indicator in the button is OFF, the signal is un-attenuated; the trigger level range is -5 V to $+5\text{ V}$ and the sensitivity can be 0.02 , 0.05 or 0.1 V .

If Auto Level or Volt is selected, the correct attenuator setting will be selected automatically.

When the indicator is ON the signal is attenuated 10 times; the Trigger level range becomes -50 V to $+50\text{ V}$ and the sensitivity becomes be 0.2 V , 0.5 or 1.0 V .

When the button indicator is ON, the active slope of the input is changed from positive to negative.

Dual functions:

You can remove any DC-component with AC-coupling.

1) AC- or DC- coupled input.

For frequency, period, and ratio measurements: Select AC-coupling and set the sensitivity so that the hysteresis band of the Timer/Counter is about half the amplitude of the input signal.

2) Selection of variable sensitivity (AC) with 0 V trigger level or selection of variable trigger level (DC) with maximum sensitivity.

For time measurements: Select DC-coupling and set the trigger level to the desired level.

NOTE: AC coupling together with Auto Level results in maximum sensitivity and automatic trigger level setting.

The auto-level function always sets the DC trigger-level to 50% of the amplitude, it does also switch on the attenuators when needed. Auto-level is selected simultaneously for both A and B inputs.

NOTE: Auto level gives automatic trigger level setting to AC coupled inputs also.

The measuring rate is reduced to about two measurements/second when using Auto-Level.

Use Read-Level to check what trigger-levels Auto-Level has selected.

The sensitivity is decreased to 150 mVpp , and the minimum frequency is 100 Hz .

For frequency, period, and ratio measurements:

If the sensitivity is too high, the Timer/Counter will be triggered by noise and interference instead of by the signal.

Select AC-coupling and set the sensitivity so that the hysteresis band of the Timer/Counter is about half the amplitude of the input signal.

For time measurements:

Select DC-coupling and set the trigger level to the desired level.

CONTROL


OPERATING THE CONTROL

DISPLAY

GPIB-CODE




The **READ LEVEL** push-button. When the indicator is on, the display shows the trigger levels on the display.

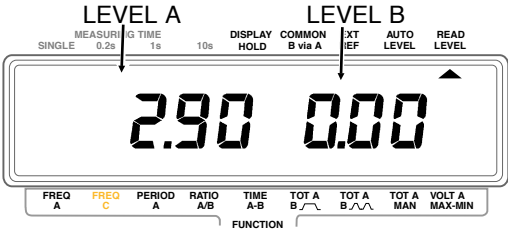

Use INPA? and INPB? to read input settings to the controller



The **COMMON B via A** push-button. When the indicator is on, the signal on Input-A is also connected to Input-B.

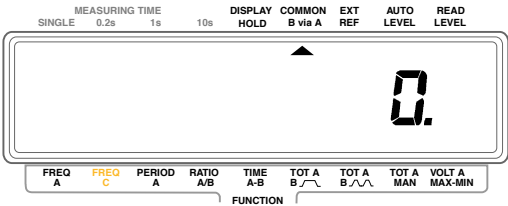


COM ON
COM OFF



Connect the signal to **INPUT-C** via a BNC-cable.



Connect an external 10 MHz frequency source to the BNC-connector on the rear panel of the Timer/Counter marked **EXT REF INPUT**.

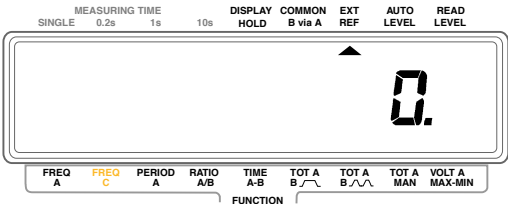

Not bus
controllable.

FUNCTION AND RANGE

HINTS AND COMMENTS

When active, trigger levels will be displayed according to this table:

	Auto Level	Manual
DC	Level selected by Auto.	Level set using Set Value.
AC	Level selected by auto.	0 V.

Use Read-Level to check what trigger-levels Auto-Level has selected.

When active, the signal on Input-A is also connected to Input-B.

You can use COM B via A and the manual trigger level settings to make accurate rise-time measurements:

The DC/AC and Attenuator switches for Input-A affects both Input-A and B. The Input-B DC/AC and Attenuator switches have no effect. (See figure 7).

Trigger level/sensitivity and Slope can be selected separately.

1. Select AC-coupling, COM B via A and positive slope for input A and B.
2. Select VOLT A MAX-MIN and read the amplitude of the signal.
3. Calculate 10 % of the peak to peak voltage.
4. Depress SET A, use and to set trigger level A to the MIN reading plus the 10 % of Vpp.
5. Depress SET B, use and to set trigger level B to the MAX reading minus the 10 % of Vpp.
6. Select TIME A-B.

This is the HF-input which must be used when the FREQ-C function is selected. If the Timer/Counter does not include the Input-C option, the BNC-connector is replaced by a plastic plug.

RATIO C/A and RATIO C/B can be selected via the bus.

Range:

70 to 1300 MHz.

Impedance:

50Ω

Sensitivity:

10 mV_{RMS} up to 900 MHz, 15 mV_{RMS} 900-1100 MHz and 40 mV_{RMS} above.

Max voltage:

12 V_{RMS}

The Timer/Counter automatically detects if a suitable signal is connected to the EXT- REF Input-connector.

Use external reference when the measurement requires ultra-high stability.

Suitable signal:

10 ± 0.1 MHz, 0.5 to 15 Vrms Sine wave.

The Timer/Counter must still have the internal time base even if an external reference frequency is used.

If single is selected, the EXT REF indicator on the display is not switched on until after the first measurement.

Battery Unit

Operation

When a battery unit is installed, the counter can operate for 2 hours without mains supply.

WARNING: When battery operated, the counter is not grounded. You must not connect the counter to any signal that is higher than 30Vrms from ground potential. If you do, the counter will be dangerous.

The display starts blinking shortly before the battery is discharged.

The counter charges the battery automatically when connected to the mains, no matter how the Power-switch is set. Charging a discharged battery to 75 % of full capacity will take 7 hours, and to full capacity, 24 hours.

If the counter is connected to the mains and switched on, it will not switch to battery operation if you disconnect the mains. You must first switch the counter OFF with the power switch, then ON again before the battery unit supplies the counter.

Battery Care

The capacity of the rechargeable battery degrades if the counter is not powered by the battery frequently. To keep the battery from degrading, cycle the battery, from fully charged to fully discharged, occasionally.

The capacity of a degraded battery can be restored by cycling the battery a number of times, but a restored battery will never reach the capacity of a new one.

If you must store your counter for some time without using it, store it in a cool and dry place. Leave the counter with the mains cable connected if possible. If not, don't disconnect the mains cable until the battery is fully charged, then charge the battery for at least 8 hours every 3 months.

CAUTION: Prolonged storage or use of the counter at temperatures above +40°C shortens the life of the battery.

The battery will freeze if it is not sufficiently charged when stored at a low temperature. 75% charge is sufficient for -40°C.

Error Codes

The counter can display the following error codes if something goes wrong.

<i>Error OF</i>	Overflow in the counting registers. Select a shorter Measuring-time if you get this error code, unless the counter is set to TOTALIZE, then you must press reset and start again from zero.
<i>Error 01</i>	RAM memory error
<i>Error 02</i>	Measuring logic error
<i>Error 03</i>	Internal bus error

If the counter shows one of these error codes, try switching the counter off and on again. If error code 01-03 persists, call Fluke service. Look on the last page in this manual for Phone No. and address.

GPIB-INTERFACE OPERATION

Introduction

The PM 6666 can be controlled by a computer (controller) via the GPIB-interface option, PM 9604. All functions that can be controlled from the front panel can also be controlled via the bus in a similar way, except the power switch. The additional micro-processor on the interface board has made it possible to add functions. You can obtain continuously variable Measuring-time, bus-learn, high-speed-dump etc., but these functions are only accessible via the bus.

To select a function, you send a command to the counter. We have chosen the text on the front panel as commands, wherever possible, in order to make them easy to remember. E.g. the command to select Frequency-C is FREQ C and the command to select Ratio A/B is RATIO A,B.

NOTE: The characters in a command can be in both upper and lower case.

What can I do using the Bus?

All the capabilities of the interface for the PM 6666 are explained below. If you want a complete description of all GPIB-interface functions, read the 'Fluke Instrumentation-Systems Reference-Manual'.

Summary

Description	Code
Source handshake	SH1
Acceptor handshake	AH1
Control function	CØ
Talker Function	T5
Listener function	L4
Service request	SR1
Remote/local function	RL1
Parallel poll	PPØ
Device clear function	DC1
Device trigger function	DT1
Bus drivers	E2

Source and Acceptor Handshake SH1, AH1

SH1 and AH1 simply means that the counter can exchange data with other instruments or a controller, using the bus handshake lines; DAV, NRFD, NADC.

Control Function, CØ

The counter does not function as a controller.

Talker Function, T5

The counter can send responses and the results of its measurements to other devices or to the controller. T5 means that it has the following functions:

- Basic talker.
- Talk only mode.
- It can send out a status byte as response to a serial poll from the controller .
- Automatic un-addressing as talker when it is addressed as a listener.

Listener Function, L4

The counter can receive programming instructions from the controller. L4 means the following functions:

- Basic listener.
- No listen only.
- Automatic un-addressing as listener when addressed as a talker.

Service Request, SR1

The counter can call for attention from the controller e.g. when a measurement is completed and a result is available.

Remote/Local, RL1

You can control the counter manually (locally) from the front panel, or remotely from the controller. The LLO, local-lock-out function, can disable the LOCAL button on the front panel.

Parallel Poll, PPØ

The counter does not have any parallel poll facility.

Device Clear, DC1

The controller can reset the counter, forcing it to default settings, via interface message DCL (Device clear) or SDC (Selective Device Clear).

Device Trigger, DT1

You can start a new measurement from the controller via interface message GET (Group Execute Trigger).

Bus Drivers, E2

The GPIB interface has tri-state bus drivers.

Connecting the Controller

The bus interface connector is on the rear panel of the counter. If your counter does not have any connector, you must install the GPIB-interface option, see installation.

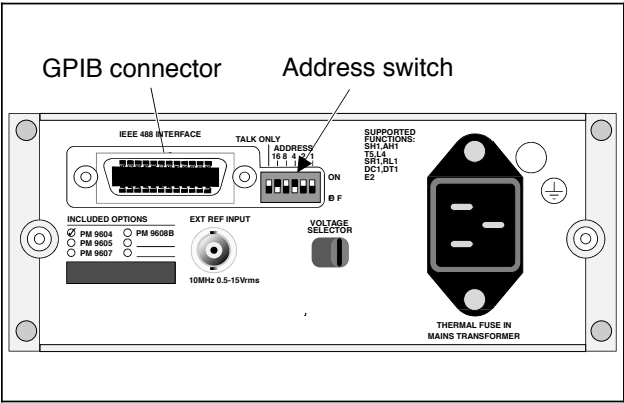


Figure 8 GPIB connector and address switch, the numbers above the switches indicate the significance of each switch.

Connect the controller via an IEEE-488 cable to the bus connector. If you use IEC-625 cables, an adapter is available, see ordering information at the end of this manual.

Giving the Counter an Address

The counter must have a unique address so that the controller can communicate with it. The address is selected by setting switches to the binary equivalent of the address you want. The switches are located to the right of the interface connector. The OFF position means 0 and the ON position means 1.

Ad- dress	Switch settings	Ad- dress	Switch settings	Ad- dress	Switch settings
0	00000	10*	01010	20	10100
1	00001	11	01011	21	10101
2	00010	12	01100	22	10110
3	00011	13	01101	23	10111
4	00100	14	01110	24	11000
5	00101	15	01111	25	11001
6	00110	16	10000	26	11010
7	00111	17	10001	27	11011
8	01000	18	10010	28	11100
9	01001	19	10011	29	11101
				30	11110

*Factory setting.

NOTE: 31 is the bus command for "Untalk" and should not be used. If 31 is selected the counter will work as if address 0 is selected.

Talk-Only

The leftmost switch in the address switch block is the TALK ONLY switch. If you set it to '1', the counter will output measurement results on the bus continuously. It will not react to any incoming commands.

This setting may only be used if the counter is connected to a 'Listen only' device such as a printer. Set the switch to '0' when you want normal bus communication.

Talk only is set to '0' on delivery.

The counter is now ready for bus control.

Checking the Communication

To check if the counter and the controller can communicate, address the counter and execute the following sequence: (The programming example is for an HP-85 controller.)

Type on controller:	This should happen.
REMOTE 710	The remote indicator should be switched on.
OUTPUT 710;"ID?"	Ask for the counter identity.
ENTER 710;A\$	Input result from counter.
DISP A\$	The response on the display of the controller is the identity of the counter.

If everything is OK, the counter will identify itself as:

PM6666/YZW/MN

where:

Y = 4 if the counter has an HF-input, otherwise 0.
Z = 3 for MTCXO, otherwise 1
W = 6 (GPIB-bus is installed)
M = Revision No. of counter firmware
N = Revision No. of GPIB-bus firmware

Two Ways of Programming

The simplest way of programming the counter is by manually setting up the measurement you want from the front panel of the counter, then let the controller ask the counter how it is set up. The data the controller gets from the counter can be used to set up the same measurement over and over again. This method is called 'Bus-learn' and will be explained later.

The other method is to make a program message where each step of the set-up is separately specified.

Programming Checklist

Check that the following steps have been taken to ensure correct programming of the instrument.

Normally only the six first steps must be programmed.

- Do you know the current setting of the counter? If not, send device clear 'D' to get the default settings.
- Select Measuring-function; (Default: Frequency-A.)
- Select Measuring-time;(Default: 0.2 s.)
- Select Trigger-slopes; (Default on Input-A and Input-B: Positive.)
- Select Coupling; (Default on Input-A: AC.) (Default on Input-B: DC.)
- Select Trigger-level;(Default: AUTO.)

For advanced programming, check the following steps.

- Set Output separator; (Default: LF.)
- Set EOI mode; (Default: OFF.)
- Set service request(SRQ) -mask; (Default, No SRQ.)
- Select Free-Run on or off; (Default: ON.)
- If Free-Run is off, select Time-Out if desired; (Default: Infinite, programmed as 0 s.)
- Set Output-mode; (Default: Normal output format, High-speed dump OFF and MTCXO compensation ON.)

All functions and commands in the checklist will be explained later.


NOTE: *You only have to program the changes from the previous set-up.*

Syntax

What is a Programming Command?

A programming command consists of a header, addressing the function you want, and a body instructing the function what to do.

EXAMPLE:

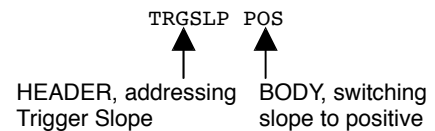

NOTE: *Some programming commands consists only of the Header, e.g. trigger command 'X'.*

What is a Programming Message?


A programming message is a number of programming commands with separators between them. E.g. the commands necessary to set up a measurement.

EXAMPLE: `PER A;MTIME 0`

Input Separator

All communication between the counter and the controller uses sequences of ASCII-characters terminated by a separator. Input separators are the separators sent by the controller. They are used in four different places:

Between header and body	As unit separator between bodies	Between program commands	To end a program message
-------------------------	----------------------------------	--------------------------	--------------------------

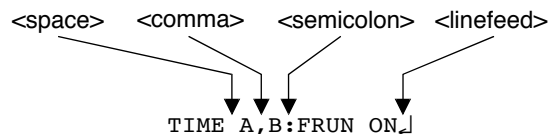

The separators in the example above are the ones normally used in respective place. The counter will however accept any one in any place.

The following separators will also work in any of the four places: colon, CR, ETB, ETX, the separator selected as output separator, as well as an active EOI-signal.

Order of Commands in a Program Message

Normally, the programming commands in a programming message can be placed in any order.

However, the following commands must always be placed at the end of a program message since any command sent after them will disable the selection:

INPA?	MEAC?	FNC?	X
INPB?	BUS?	ID?	OUTM 4

These commands will be ignored if found anywhere but in the end of a message.

<number>

In some program commands, the body is replaced by the term <number> or <num>. Here you must enter a numerical value. <number> can be entered in any format you like

e.g. 1.23 can also be entered as $0.000000123 \cdot 10^7$ or $1230000 \cdot 10^{-6}$. If you enter more digits than the counter needs, your entry will be truncated. The counter will stop if an entry is out of the counters range. To proceed, the status message 'Programming error' must be reset, see 'Status byte'.

Selecting Output Separator

Output separators terminate messages from the counter to the controller. The separator needed is different for different controllers; see the Operators' Manual for your controller.

At power on, the output separator of the counter is line-feed 'LF' (10_{decimal}).

The output separator can be changed by sending SPR <number> to the counter. <number> is the decimal value of the ISO (ASCII)-code for the desired separator. It can be 0-26, 28-31, ESC code, 27, is not accepted.

Only one <number> can be entered as separator. If you want the combination of CR+LF (13_{dec} + 10_{dec}), it is selected by 'SPR 255'.

EXAMPLE:

SPR 13 changes the output separator to CR

SPR 255 changes the output separator to CR+LF

The counter can signal EOI together with the last output separator in responses and output data.

EOI ON switches on the function.

EOI OFF switches it off.

Default setting is EOI OFF.

The selected separator and EOI will not be altered by LOCAL from the front panel nor by LOCAL or 'Device clear' from the bus.

How to Select Function

Standard Functions

Functions are selected by sending the appropriate function command to the counter, e.g. FREQ A. The space between FREQ and A indicates the input separator that you always must insert.



Function	Command	Comment,
Frequency A	FREQ A	Default
Frequency C*	FREQ C	
Period A	PER A	
Ratio A/B	RATIO A,B	
Time A-B	TIME A,B	
Totalize A Gated by B	TOTG A,B	
Totalize A	TOTS A,B	
Start/stop by B		
Totalize A Manually	TOTM A	See 'Totalize start/stop'
Volt A max	VMAX A	
Volt A min	VMIN A	

The function cursor on the display of the counter will jump to the selected function.

*Only possible if Input-C option, PM 9608B is installed.

Functions Accessible via Bus Only

When you have a GPIB interface you will get the following new functions:

Function	Command	Function cursor indicates
Frequency B	FREQ B	FREQ A
Time interval B-A	TIME B,A	TIME A-B
Totalize B Manually	TOTM B	TOT A MAN
Totalize B Gated by A	TOTG B,A	TOT A  B
Totalize B Start/stop by A	TOTS B,A	TOT A  B
Ratio B/A	RATIO B,A	RATIO A/B
Ratio C/A*	RATIO C,A	RATIO A/B
Ratio C/B	RATIO C,B	RATIO A/B
Volt B max**	VMAX B	VOLT A MAX-MIN
Volt B min**	VMIN B	VOLT A MAX-MIN

* Only possible if Input-C option, PM 9608B is installed.

** Don't use VMAX B or VMIN B together with COM B via A to measure the voltage on input A. The results will be unreliable.

When the counter switches to LOCAL, the function indicated by the Function-cursor will be selected.

The counter will not return to the 'bus only' function when it returns to remote. To return to the 'bus only' function you must re-program the counter.

The specifications of some 'bus-only' functions differ from the specifications of its similar front-panel selectable function. See 'Specifications'.

Selecting Measuring-Time

The Measuring-time can be set to any value between 10 ms and 10 s, or SINGLE-measuring. Any value below 10 ms will be interpreted as SINGLE. Values above 10 s will be out of range and cause an error. The program command is MTIME <number>. Always enter the Measuring-time in seconds. The entered value will be truncated to the nearest 10 ms increment.

Meas Time.	Command	Comment
0.2 s	MTIME 0.2	Default
10 ms	MTIME 0.01	You will not be able to see the gate indicator blinking if the Measuring-time is below 50 ms
7.34567 s	MTIME 7.34567	The Measuring-time will be 7.34 s.
2 ms	MTIME 0.002	Out of range
SINGLE	MTIME 0	A display time of 50 ms is set so that you can see the Gate-indicator.
25 s	MTIME 25.0	Out of range and error, the counter will stop. It can indicate programming error by sending an SRQ if selected in the SRQ-mask.

The Measuring-time cursor on the display will indicate 0.2 s for all programmed Measuring-times except SINGLE, which will be indicated as usual.

Selecting Input settings

Before selecting input settings you must tell the counter which input you want to address:

Input	Command	Comment
A	INPA	Default setting.
B	INPB	

Now you can send the input setting commands:

Attenuator*	Command	Comment
1	ATT OFF	Default
10	ATT ON	
Trigger slope	Command	Comment
Positive	TRGSLP POS	
Negative	TRGSLP NEG	
Coupling	Command	Comment
AC	COUPL AC	Default on A.
DC	COUPL DC	Default on B.
Sensitivity*	Command	Comment
	SENS <number>	
20 mV	SENS 1	Default
50 mV	SENS 2	
100 mV	SENS 3	

If ATT10 is selected sensitivity will be 0.2 V 0.5 V and 1.0 V

Trigger level*	Command	Comment
Volt	TRGLVL	<num><num> = trigger level in Volts. Range: 5.10V to +5.10V. Minimum increment: 0.02 V. Default 0 V.

If ATT10 is selected, Trigger level range will be 51 V to +51 V and the minimum increment 0.2 V.

The following commands affect both inputs regardless of which input is selected:

Auto level*	Command	Comment
Automatic	AUTO ON	Default
Manual	AUTO OFF	

*If AUTO is ON, the attenuator, trigger level and sensitivity settings are controlled by AUTO. If any of these parameters are reprogrammed when AUTO is ON, the new setting will be stored and used when AUTO is switched OFF. If the controller asks for program data out during AUTO, the answer will be the selections made by AUTO.

Common B via A	Command	Comment
on	COM ON	
off	COM OFF	Default

When COM ON is selected, the AC/DC and attenuator settings of Input-A will affect both channels. If AC/DC or the attenuator of input-B is reprogrammed during COM ON, the setting will be stored and used when COM is switched OFF. The program data out for Input-B will be the programmed settings, not the Input-A settings used during COM ON.

Totalize Start/Stop

When TOT A or TOT B manual is selected, the gate is opened and closed by the controller instead of by pressing the button on the front panel. To start the counting after selecting TOTM A or TOTM B, the gate must be opened.

Totalize	Command	Comment
Start	GATE OPEN	Starts counting.
Stop	GATE CLOSE	Stops counting. Default.

NOTE: Multiple GATE OPEN/GATE CLOSE will accumulate the results in the counting registers. Any other command but GATE OPEN/GATE CLOSE will stop the totalizing and reset the counting registers to zero.

Free-Run/Triggered

The counter can work in two different ways:

1. **Free-Run**, where it starts a new measurement as soon as the previous measurement is finished.

The first measuring result that is ready after the counter receives a read command, will be sent to the controller. When the result has been read, the output buffer is reset to zero until a new result is ready. One and the same measuring result can only be read once.

2. **Triggered**, where the counter waits for trigger command GET or 'X' from the controller before it starts a measurement. When the measurement is completed, the counter will wait until the controller reads the measuring results, then the output buffer is reset. The function is the same as when Displ Hold is selected from the front panel and you start a new measurement by pressing the reset button.

Free-Run	Command	Comment
Off	FRUN OFF	This function is sometimes called Triggered-Mode
On	FRUN ON	TRIG OFF gives the same result. Default.

Free-Run ON or OFF will not be indicated on the display. When the counter switches to LOCAL, Free-Run will always be ON but when the counter switches back to remote, it will return to its previously programmed settings.

Time-Out

When Free-Run is switched off it is possible to set a time-limit (time-out) between the start of a measurement and the time when a result is expected to be ready. If no result is achieved before the set time is out, the counter can output a Service Request, SRQ. Time-Out must be selected in the SRQ-mask; see 'Service Request'. The programming command is TOUT <number>. The timeout can be set to any value between 100 ms and 25.5 s, the minimum increment is 100 ms.

Time-Out	Command	Comment
100 ms	TOUT 0.1	Time-Out is only intended to be used with Free-Run off.
Off	TOUT 0	Always send this command when Free-Run is switched on. Default.

Time-Out is not indicated on the display. When the counter switches to LOCAL, Time-Out is off, but when switched to remote again, the set Time-Out will be active again.

*Time-out can be switched on when free-run is on but it will not serve any purpose.

Bus Triggering

'X' will always cause the counter to start a new measurement. X will work as group execute trigger, GET. 'X' must always be placed in the end of a program message.

Service Request

The counter can send a service request, SRQ, when it wants service from the controller. After an SRQ, the controller must execute a serial poll which means that it must ask each of the instruments for status information until it finds the SRQ-giving instrument, evaluate the Status-byte of the instrument and then make a decision what to do.

To enable the counter to send service requests, you must set an SRQ-mask telling the instrument which conditions will cause SRQ.

Command	Comment
MSR <number>	<number> is a decimal value depending on selected SRQ reasons.

Bit	Decimal value	Reason for SRQ.
7	128	Not used.
6	64	Time-Out.
5	32	Hardware fault.
4	16	Programming error.
3	8	Measuring stop enable.
2	4	Measuring start enable.
1	2	Ready for triggering.
0	1	Measuring result ready.

*If SRQ for Measuring result ready is selected, the counter will stop and wait until the controller fetches the result before a new measurement can start.

Write down the binary word for the required SRQ, then convert it to a decimal value and insert the value as <number>.

EXAMPLE: If you want SRQ to be sent when the time-out elapses, when the counter is ready for triggering and when the result is ready, the binary word required is 01000011 which is decimal 67; see table below.

Value if the		Example	
Bit	bit is 1	Binary word	Decimal value
7	128	0	0
6	64	1	64 Time-Out
5	32	0	0
4	16	0	0
3	8	0	0
2	4	0	0
1	2	1	2 Ready to trigger
0	1	1	1 Meas. result ready
			67

Send MSR 67 to the counter.

Status Byte

The counter sends its status byte to the controller on a serial poll. The bits in the status byte reflects different events or conditions in the counter. There are two types of status bits:

A Conditional Bit indicates the current condition of what its monitoring, all the time.

An Event Bit indicate that an event has occurred. When the event occurs, the bit is set to 1. It is not reset to 0 until a new measurement starts.

The different bits indicate the following information:

Bit	Function	
7	Always 0	
6	1 = SRQ has been sent* otherwise 0 (Event bit).	
5	Abnormal bit. Always 0 during normal measurements	1 if something is wrong. Affects bit 0-3
4	0 = Main Gate closed	1 = Main Gate open**
3-0	Depends on Abnormal bit	see below (Event bits.)
Bit	Abnormal bit = 1	Abnormal bit = 0
3	Not Used	Measuring stop enable.
2	Time-Out	Measuring start enable.
1	Hardware fault	Ready for triggering
0	Programing error	Measuring result ready.

* Only if SRQ-mask is set for Service-Request.

** This is a conditional bit that monitors the Main-Gate in the counter. When TOT MAN is selected the bit will always be 0.

Measuring Start Enable indicates that the counter logic is ready to start a measurement.

Measuring Stop Enable indicates that the counter logic is ready to stop a measurement.

These bits can be used to detect if the input signal to the counter is present; If the counter never stops it's measurement and the status byte stops at:

XX00X1XX	No input signal. The measurement is ready to start (bit 2 = 1) but the Main Gate has not opened (bit 4 = 0).
XX011XXX	Input signal lost during measurement. The measurement is ready to stop (bit 3 = 1) but the main gate is still open (bit 4 = 1)

(X = don't care)

NOTE: SRQ is normally not used for these bits.

Ready For Triggering indicates that all preparations for a measurement is completed. The preparation time depends on selected functions. It can be up to 700 ms (when auto triggering is selected).

If triggered mode is selected, the counter waits to be triggered, otherwise it proceeds with the measurement. You can have the SRQ-mask set for SRQ at ready for triggering. This way the controller knows when it is possible to trigger the counter.

Measuring Result Ready indicates that the measurement and calculation of the result is completed and that the result is present in the output buffer. If SRQ for is selected for this event, or Free-run is OFF, the counting will stop until the controller has read the result.

Programming Error is generated if the counter receives messages with illegal syntax or values out of its range.

If 'Programming error' is generated, the counter will stop measuring. It will continue to receive and store correct programming messages and use them when the error status is reset and a new measurement starts.

Correct the program before resetting the status message.

Use one of the following bus commands to reset the status byte:

Go to local (GTL), Device clear (DCL) or selective device clear (SDC).

Any of the following messages will have the same effect on the counter:

D, FNC?, MEAC?, INPA?, INPB?, ID? or BUS?.

A serial poll will also reset the status message if the SRQ mask is set for 'SRQ at Programming error'.

Hardware Fault is generated when the counter displays the codes described in 'Error codes' in the 'Operating instructions' in this manual.

Time-Out is generated when the set time-out period has elapsed.

Possible Status Messages

Normal Measurement

The status byte changes as follows during a normal measurement:

0, 2, 6, 22, 30, 14, 15, 0,

Decimal	Binary	Important bits (X = don't care)	Comment
0	00000000		Preparing a measurement or, High-speed dump or Volt measurements in progress.
2	00000010	XX0XXX1X	Preparations ready. If Free-run OFF
6	00000110	XX0XX1XX	Measuring start enable.
22	00010110	XX01XXXX	Main-Gate open
30	00011110	XX0X1XXX	Measuring stop enable.
14	00001110		Calculating the measuring result.
15	00001111	XX0XXXX1	Measuring result ready.

Error conditions

Decimal	Binary 76543210	Important bits (X = don't care)	Comment
33	00100001	XX1XXXX1	Programming error.
34	00100010	XX1XXX1X	Hardware fault.
36	00100100	XX1XX1XX	Time-out.

* If Service request (SRQ) is enabled for an event, the decimal value of the status message for that event will be increased by 64. The reason for this is that bit 6 will be set to one at the same time as the bit indicating the event.

Output mode

Setting the output mode selects the format in which the counter will output measuring results to the controller. Select output mode by sending OUTM <number> where <number> is a decimal value between 0 and 4 depending on the selected output mode.

<number>	High-speed dump	Output format	MTCXO compensati on
0	OFF	NORMAL	ON
1	OFF	SHORT	ON
2	OFF	NORMAL	OFF
3	OFF	SHORT	OFF
4	ON	FOR HIGH SPEED DUMP	OFF **


Default <number> is 0, when switching to local and back again, the <number> will be reset to 0.

The MTCXO compensation can be switched off to increase the measuring speed, providing a result with five digits accuracy is sufficient. The time gained will be up to 400 ms/measurement.

** Must be in the end of a program message.

Output format**Normal**

When you select normal output format, the output will be as follows:

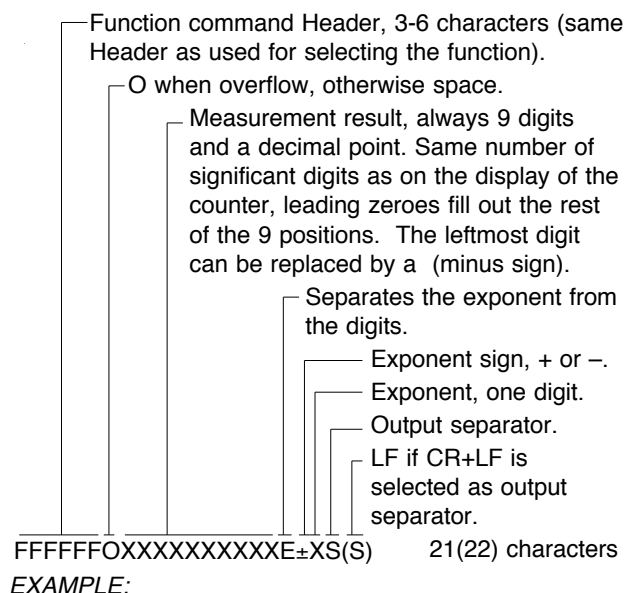

Normal operation:


PER 000001.667E-4

Overflow:

PER 09.9999999E+9

Short

Short format means that function command and leading zeros are not sent to the controller. When you select short output format, the number of digits may vary depending on the measurement result. The example below shows a result with five significant digits:

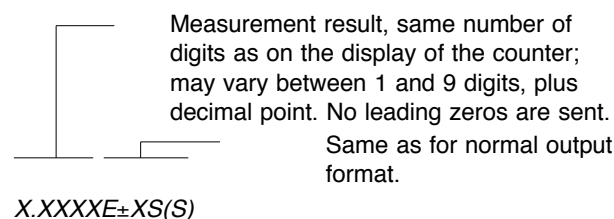

EXAMPLE:

Normal operation:

1.667E-4

Overflow:

9.9999999E+9

High-speed Dump

The most time-consuming part of a measuring cycle is calculating the result. The calculations limit the number of possible results/second to about 5, even when the Measuring-time is short.

When however High-Speed dump is selected all calculations are left to the controller instead, and the counter can concentrate on measuring at a rate of over 100 measurements/second.

High-speed dump cannot be used for voltage measurements nor for Totalize manually. MTCXO compensation is not possible.

Starting

NOTE: *Always make sure you have input signal and that the input triggers correctly before turning on high-speed dump! (See Stopping below).*

If Triggered Mode is OFF When High-speed dump is programmed the counter will immediately start transmitting results, so the OUTM 4 command must always be placed at the end of the program message.

If Triggered Mode is ON After receiving OUTM 4 the counter waits for bus command GET before it starts.

NOTE: *The minimum time between OUTM 4 and GET is 70 ms.*


Stopping

Any programming command from the controller will end High-Speed dump. High-speed dump is stopped inbetween two measurements. If you switch on high-speed dump without having an input signal, the counter must be switched off/on to regain control over the counter.

NOTE: *The Power-switch is the only front panel control that will stop High-Speed dump, the LOCAL-button will not have any effect.*

Output Format


The output format will always be two letters followed by 12 hexadecimal digits. The two letters will tell the controller how to evaluate the twelve hex-digits, which represent the contents in the internal registers of the counter.

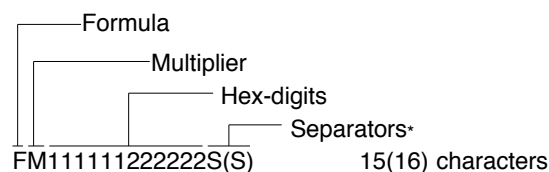


* The counter cannot signal EOI together with the output separator when High-speed dump is selected.

Hex-digits

All 12 digits together represent register 3.

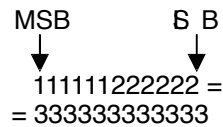

When the digits are divided into two groups, the first six digits represents register 1 and the last six digits represent register 2.



Formula Depending on the selected measuring function different calculations must be made to convert the register contents to readable measuring results.

The first letter (F) in the output data indicates which formula you must use.

If 'F'= Use this formula

C	$\frac{\text{Reg.2} \times 10^7}{\text{Reg.1}}$
F	Reg.3
G	$\frac{\text{Reg.2} \times 10^7}{\text{Reg.1}}$
I	$\frac{\text{Reg.1} \times 10^{-7}}{\text{Reg.2}}$
J	$\text{Reg.3} \times 10^{-7}$
K	$\frac{\text{Reg.2} \times 10^{-7}}{\text{Reg.1}}$

Multiplier The second letter (M) in the output data represents a multiplier which you must multiply the results by before presenting it.

If 'M'= Multiply results by:

H	60
L	256
N	0.1
O	10
P	1

EXAMPLE 1:

The following HP-85 program sets up a High-Speed dump Single-period measurement.

```
OUTPUT 710;"PER A,MTIME 0"
ENTER 710;A$
A$
PER 000001.667E-4
OUTPUT 710;OUTM 4
ENTER 710;A$
A$
JP0000000000683
```

'J' means that you must use formula J which is:

$\text{Reg. 3} \times 10^{-7}$

000000000683 is the hex-contents of register 3. The register contents must be converted to a decimal number and entered in the formula;

$$683_{Hex} = 6 \times 16^2 + 8 \times 16 + 3 = 1667_{Decimal}$$

The result is 1667×10^{-7} , which you must multiply by "Multiplier P", which is 1, to get the measuring result.

$$1667 \times 10^{-7} \times 1 = 1667 \times 10^{-4} s = 166.7 \mu s$$

EXAMPLE 2:

The following HP-85 program sets up a High-Speed dump Frequency A measurement with 1 s Measuring-time.

```
OUTPUT 710;"FREQ A,MTIME 1"
ENTER 710;A$
A$
FREQ 006.000006E3
OUTPUT 710;OUTM 4
ENTER 710;A$
A$
CO98555B000257
```

$$\frac{\text{Reg.2} \times 10^7}{\text{Reg.1}}$$

Formula 'C' is:

98555B is the hex-contents of register 1, and 000257 is the hex-contents of register 2. Both register contents must be converted to decimal numbers and put into the formula;

$$\frac{(2 \times 16^2 + 5 \times 16 + 7) \times 10^7}{9 \times 16^5 + 8 \times 16^4 + 5 \times 16^3 + 5 \times 16^2 + 5 \times 16 + 11} = 600.0006209...$$

This number is multiplied by multiplier 'O' to get the measuring result:

$$600.0006209 \times 10 = 6000.006209 = 6.000006209 \times 10^3 \text{ Hz}$$

How many digits are significant?

Select the formula for 'LSD displayed' in the 'Specifications'. There are different formulas for different measurements.

Frequency:

$$\text{LSD displayed: } \frac{2.5 \times 10^{-7} \times 6000...}{1} = 0.0015$$

$$\text{LSD} = 0.001 \text{ Hz}$$

The result is $6.000006 \times 10^3 \text{ Hz}$

Bus Learn

- Set the counter to LOCAL and select the functions you want from the front panel.
- If required, set the counter to Remote and program special bus-functions from the controller.

- Check that the counter/controller performs the intended functions.
- If it does, send the five queries from the controller to the counter and store the responses in the controller for later use.

These are the five queries:

Query	Response	Max No. of characters
FNC?	Functions setting; e.g. FREQ A9	9
MEAC?	Measurement control; MTIME <number>,FRUN ON20	20
	TOUT <number>	9
INPA?	Input A settings; TRGSLP POS,ATT OFF	18
	COUPL AC,AUTO OFF*	17
	TRGLVL <number>,SENS 1	19
INPB?	Input settings; TRGSLP POS,ATT OFF B	18
	COUPL DC,COM OFF*	16
	TRGLVL <number>,SENS 1	19
BUS?	Bus interface commands; MSR <number>,OUTM	16
	<number>	15
	EOI OFF,SPR <number>	

As you can see, the responses are the same commands as you use for normal programming. So if you have to change anything in a program made using bus learn, or add functions which are not selectable from the front panel, these program messages can easily be edited in the controller.

NOTE: MEAC? and BUS? result in a response sent as two lines, each terminated by the selected separator. INPA? and INPB? result in a response sent as a three line messages.

NOTE: The counter will stop measuring until all lines of the response have been read or the response has been terminated.

NOTE: The query command must always be the last command in a program message.

*If AUTO or COM is switched ON, the responses to INPA? and INPB? must be interpreted in a different way, see 'Selecting Input settings'.

Terminating a Response

It is not necessary to read all output lines. Any program message will terminate the response.

Programming Data Out

Any one of the queries used for Bus Learn can be used to ask the counter about its current setting, see 'Bus Learn' above.

What Happens When I Switch to Local?

Switching to LOCAL causes the counter to adapt the settings indicated on the display, see 'How to select function'. This means that the counter will never have settings in LOCAL which are not possible to set via the front panel.

When switching to remote again, the LOCAL-setting will remain. Bus-functions like SRQ mask, output separator, EOI, etc. will not be altered by switching to LOCAL and back again.

Summary of Bus Commands

Function Selecting Commands

FREQ A	Frequency measurement on Input-A.
FREQ B	Frequency measurement on Input-B.*
FREQ C	Frequency measurement on Input-C.
PER A	Period on Input-A.
TIME A, B	Time interval A to B.
TIME B, A	Time interval B to A.*
TOTG A, B	Totalize A, gated by Input-B.
TOTG B, A	Totalize B, gated by Input-A.*
TOTS A, B	Totalize A, started and stopped by B.
TOTS B, A	Totalize B, started and stopped by A.*
TOTM A	Totalize A, start/stop by GATE OPEN/CLOSED on the bus.
TOTM B	Totalize B, start/stop by GATE OPEN/CLOSED on the bus.*
RATIO A, B	No. of pulses on A No. of pulses on B.
RATIO B, A	No. of pulses on B No. of pulses on A.*
RATIO C, A	No. of pulses on C No. of pulses on A.*
RATIO C, B	No. of pulses on C No. of pulses on B.*
VMAX A	Positive peak voltage on Input-A.
VMIN A	Negative peak voltage on Input-A.
VMAX B	Positive peak voltage on Input-B.*
VMIN B	Negative peak voltage on Input-B.*
FNC?	Output the current function setting.***

Input Setting Commands

INPA	Selects Input-A.
INPB	Selects Input-B.
TRGSLP POS	Triggering on positive slope.
TRGSLP NEG	Triggering on negative slope.
COUPL AC	AC coupling.
COUPL DC	DC coupling.
COM ON	A and B common via Input-A.
COM OFF	A and B separated.
SENS <num>	<num> = 1 gives 20 mV sensitivity <num> = 2 gives 50 mV sensitivity <num> = 3 gives 100mV sensitivity.

TRGLVL <num>	Trigger level, +5.10 V to -5.10 V. = polarity sign. <num> = level in Volt.
AUTO ON	Automatic trigger level selection.**
AUTO OFF	Trigger level selection via bus.**
ATT OFF	Attenuation 1.
ATT ON	Attenuation 10.
INPA?	Output the current Input-A settings.***
INPB?	Output the current Input-B settings.***

Measurement Control Commands

GATE OPEN	Starts the totalizing in TOTM A and TOTM B
GATE CLOSE	Stops totalizing.
MTIME <num>	Set Measuring-time. <num> = 0.01 to 10 s. 0 = SINGLE
FRUN ON	Selects Free-Run.
FRUN OFF	Selects Triggered mode.
TRIG OFF	Selects Free-Run.
TRIG ON	Selects Triggered mode.
TOUT <num>	Sets Time-Out. <num> = 0.1 to 25.5 s. 0 = Time-Out OFF.
MEAC?	Output the current Measurement control settings.***

Bus Related Commands

OUTM <number>

<number>	High-speed dump	Output format	MTCXO compensation
0	OFF	NORMAL	ON
1	OFF	SHORT	ON
2	OFF	NORMAL	OFF
3	OFF	SHORT	OFF
4	ON	FOR HIGH SPEED DUMP	OFF***

MSR <num>	Sets SRQ-mask, see 'Service request'.
EOI ON	Selects EOI-mode ON.
EOI OFF	Selects EOI-mode OFF.
SPR <num>	Select output separator, see 'Output separators'.
X	Device trigger, starts a new measurement.***
D	Device clear, returns to default settings.
BUS?	Output the current bus related settings.***
ID?	Output identity and which options are installed.***

* Not available in LOCAL mode.

** Affect both inputs independent of INPA/INPB.

*** This command must be placed at the end of a program message.

Programming Examples

For HP-85 Controller

This program illustrate high measuring rate obtained with High-speed dump.

The actual measuring function is selected by the user in Local-mode. When the program runs, two beep's can be heard from the HP-85, Between these beep's, the counter performs 500 measurements and the result of each measurement is transferred from the counter to the HP-85.

The output rate is approximately 125 readings/second in this example.

```

10  ! DEMO PROGRAM DUMP MODE
20  ! PM6666 WITH HP85 AS
30  ! CONTROLLER
40  ! DUMP MODE WITH FREE RUN ON
50  CLEAR
60  DIM Z$(7508) ! BUFFER FOR 500 MEASUREMENTS
    WITH 15 BYTES
70  DIM B$(14)
80  IOBUFFER Z$
90  LOCAL 710
100 DISP "SELECT FUNCTION IN LOCAL MODE!"
110 DISP "MEASURING TIME WILL BE"
120 DISP "SELECTED BY HP85 (SINGLE)!"
130 DISP "ANSWER Y WHEN READY TO START!"
140 INPUT A$
150 IF A$ <> "Y" THEN 130
160 DISP "MAKE 500 MEASUREMENTS"
170 OUTPUT 710 ; "TRIG OFF,MTIME 0,OUTM 4"
180 BEEP
190 E=TIME
200 TRANSFER 710 TO Z$ FHS ; COUNT 7500
210 F=TIME
220 TIME
230 DISP "READY! ELAPSED TIME: "; F-E; "s"
240 ! SHOW 5 RESULTS"
250 DISP "FIRST 5 RESULTS:"
260 FOR K=1 TO 5
270 ENTER Z$ ; B$
280 ! GET FORMULA CHARACTER
290 F$=B$(1,1)
300 ! GET MULTIPLYER CHARACTER
310 M$=B$(2,2)
320 ! EVALUATE REGISTER 1
330 R1=0
340 FOR I=1 TO 8
350 S=NUM(B$(I,I))-48
360 IF S>=10 THEN S=S-7
370 R1=R1*16+S
380 NEXT I
390 ! EVALUATE REGISTER 2
400 R2=0
410 FOR I=9 TO 14
420 S=NUM(B$(I,I))-48
430 IF S>=10 THEN S=S-7
440 R2=R2*16+S
450 NEXT I
460 ! EVALUATE RESULT
470 IF F$="C" THEN R=10000000*R2/R1
480 IF F$="F" THEN R=R1*16^6+R2
490 IF F$="G" THEN R=R2/R1

```

```

500 IF F$="I" THEN R=.0000001*R1/R2
510 IF F$="J" THEN R=.0000001*(R1*16^6+R2)
520 IF F$="K" THEN R=.0000001*R2/R1
530 IF M$="H" THEN R=R*60
540 IF M$="L" THEN R=R*256
550 IF M$="N" THEN R=R/10
560 IF M$="O" THEN R=R*10
570 IF M$="P" THEN R=R*1
580 DISP B$,R
590 NEXT K
600 LOCAL 710
610 END

```

.Example of a result:

```

MEASURING TIME WILL BE
SELECTED BY HP85 (SINGLE)!
ANSWER Y WHEN READY TO START!
?
Y
MAKE 500 MEASUREMENTS
READY! ELAPSED TIME: 3.927 S
FIRST 5 RESULTS:
JP0000000000031      .0000049
JP0000000000031      .0000049
JP0000000000030      .0000048
JP0000000000031      .0000049
JP0000000000031      .0000049
12751

```

For IBM PC with PM 2201

Example 1

The following example runs on an IBM compatible PC equipped with Fluke PM 2201 GPIB interface. The installation and starting up of the PC program is not described, only the application program. Line 1 to 100 must contain the declaration described in the PM 2201 manual.

The program sets up the counter for 10 Period A measurements and presents the average result on the screen.

```

100 'DEMO PROGRAM (NO 1)
110 'PM6666 AND IBM PC
120 'WITH PM2201 GPIB INTERFACE
130 'AS CONTROLLER
140 CLS 'CLEAR SCREEN
150 AD=7 'ADAPTOR NUMBER
160 ADDR=710 'COUNTER ADDRESS
170 SC=1 'SYSTEM CONTROLLER
180 RES$ = SPACE$(25) 'RESULT
190 ACT = 0 '# READ CHARACTERS IN RES$
200 MAX = 24 'MAX CHARACTERS TO READ IN RES$
210 CALL IOINIT(AD,SC) 'INIT INTERFACE
220 TIME=10 'TIMEOUT AFTER 10 SECONDS
230 CALL IOTIMEOUT (AD,TIME) 'SET TIMEOUT
240 CALL IOCLEAR(ADDR) 'SEND SDC
250 'SELECT PERIOD A, TRIGGERED MODE
260 'AND 1 S MEASURING-TIME
270 SEND$ = "PER A,TRIG ON,MTIME 1"
280 LENGTH=LEN(SEND$)
290 CALL IOOUTPUTS(ADDR,SEND$,LENGTH)
300 Z=0
310 'INPUT 10 SAMPLES
320 FOR i = 1 TO 10
330 CALL IOTRIGGER(ADDR) 'TRIGGER COUNTER
340 CALL IOENTERS(ADDR,RES$,MAX,ACT) 'READ
    RESULT
350 Z = Z + VAL(MID$(RES$,8,13))
360 NEXT I
370 PRINT "AVERAGE: ";Z/10;"S"
380 CALL IOLOCAL(ADDR) 'GO TO LOCAL
390 END

```

Example of a result:

```

AVERAGE:      9.98004E-06 S
OK

```

Example 2

This program example illustrates the 'program data out' feature of PM 6666. By asking a set of queries, the counter responds with its current setup. The output format of these answers to the queries is identical to the programming command format. The answers can be stored and used later for reprogramming (bus learn).

```

100 'DEMO PROGRAM
110 'PM6666 AND IBM PC WITH PM2201
120 GPIB INTERFACE AS CONTROLLER
130 AD=7 'ADAPTOR NUMBER
140 ADDR=710 'COUNTER ADDRESS
150 SC=1 'SYSTEM CONTROLLER
160 CALL IOINIT(AD,SC) 'INIT INTERFACE

```

```

170 TIME=10 'TIMEOUT AFTER 10 SECONDS
180 CALL IOTIMEOUT(AD,TIME)
190 CLS 'CLEAR SCREEN
200 'ASK FOR AND PRINT PROGRAM DATA
210 PRINT "COUNTING SETTING:"
220 $$ = "FNC?"
230 GOSUB 520
240 A=1
250 GOSUB 550
260 $$ = "MEAC?"
270 GOSUB 520
280 A=2
290 GOSUB 550
300 $$ = "BUS?"
310 GOSUB 520
320 A=2
330 GOSUB 550
340 $$ = "INPA?"
350 PRINT "INPA:"
360 GOSUB 520
370 A=1
380 GOSUB 550
390 $$ = "INPB?"
400 PRINT "INPB:"
410 GOSUB 520
420 A=1
430 GOSUB 550
440 $$ = "ID?"
450 PRINT
460 PRINT "COUNTER TYPE:"
470 GOSUB 520
480 A=1
490 GOSUB 550
500 CALL IOLOCAL (ADDR) 'GO TO LOCAL
510 END
520 L=LEN($$) 'LENGTH OF STRING TO SEND
530 CALL IOOUTPUTS(ADDR,$$,L) 'OUTPUT STRING
540 RETURN
550 FOR I = 1 TO A
560 MAX=25
570 ACT=0
580 RES$=SPACE$(25)
590 CALL IOENTERS(ADDR,RES$,MAX,ACT)
600 B$ = LEFT$(RES$,ACT)
610 PRINT B$;
620 NEXT I
630 RETURN

```

Example of a result:

```

COUNTER SETTING:
TIME  A;B
MTIME  1.00,FRUN ON
TOUT  00.0
MSR  000,OUTM 000
EIO OFF,SPR 010
INPA:
TRGSLP NEG
INPB:
TRGSLP POS

COUTER TYPE:
PM6666/016/22
Ok

```

Example 3

This program prompts the user to input a programming sequence. The sequence is then sent to the PM 6666 and the corresponding measuring result is read.

```

100  'DEMO PROGRAM
110  'PM6666 AND IBM PC WITH PM2201
120  'GPIB INTERFACE AS CONTROLLER
130  CLS 'CLEAR SCREEN
140  AD=7 'ADAPTOR NUMBER
150  ADDR=710 'COUNTER ADDRESS
160  SC=1 'SYSTEM CONTROLLER
170  CALL IOINIT(AD,SC) 'INIT INTERFACE
180  TIME=10 'TIMEOUT AFTER 10 SECONDS
190  CALL IOTIMEOUT (AD,TIME)
200  CALL IOCLEAR(ADDR) 'SEND SDC
210  PRINT "INPUT YOUR PROGRAMMING MESSAGE?"
220  PRINT "(TO QUIT THE PROGRAM, ANSWER *)"
230  LINE INPUT $$
240  L=LEN($$) 'LENGTH OF STRING TO SEND
250  IF L<=1 GOTO 280
260  IF $$<>"*" GOTO 280
270  END
280  CALL IOOUTPUTS(ADDR,$$,L) 'OUTPUT STRING
290  'TO BE SURE, TRIGGER COUNTER!
300  CALL IOTRIGGER(ADDR)
310  'GET THE MEASURING RESULT
320  MAX=25
330  ACT=0
340  RES$=SPACE$(25)
350  CALL IOENTERS(ADDR,RES$,MAX,ACT)
360  PRINT
370  PRINT "RESULT READ AS: ";RES$
380  PRINT
390  GOTO 210

```

Example of a result:

```

INPUT YOUR PROGRAMMING MESSAGE?
(TO QUIT THE PROGRAM, ANSWER *)
PER A,MTIME 0

```

RESULT READ AS: PER 0000001.00E-5

```

INPUT YOUR PROGRAMMING MESSAGE?
(TO QUIT THE PROGRAM, ANSWER *)

```

For IBM PC with IBM GPIB

This example runs on an IBM PC with an 'IBM General Purpose Interface Bus Adapter' instead of the Fluke PM 2201 interface.

The following set of device parameters is suitable for a PM 6666 with address 10. The device parameters are set with the configuration program 'IBCONF', see the IBM adapter manual.

Device Name: COUNTER		DEVICE PARAMETERS		Number: D 0
DESCRIPTION	NEW VALUE	VALID NAME		
Access Adapter Name?	GPIB0	± [GPIBx]		
Primary GPIB Address?	0AH	[0H to 1EH]		
Secondary GPIB Address?	00H	[60H to 7EH; 0H disables]		
Timeout setting?	T10s	± [T10us to T1000s; TNONE disables]		
EOS Byte?	0AH	[0H to FFH or '<character>]		
Terminate Read on EOS?	Yes	± [Yes or No]		
Send EOI with EOS byte?	No	± [Yes or No]		
Use 8-bit Compare on EOS?	No	± [Yes or No]		
Send EOI w/last Byte of Write?	Yes	± [Yes or No]		

Example 1

The following program sets up the counter for 10 Period A measurements and presents the average result on the screen.

```

100  'DEMO PROGRAM
110  'PM6666 AND IBM PC WITH IBM
120  'GPIB ADAPTOR AS CONTROLLER
130  CLS 'CLEAR SCREEN
140  'INIT
150  ADNAME$ = "COUNTER"
160  CALL IBFIND(ADNAME$,CNT%)
170  'SEND SDC
180  CALL IBCLR(CNT%)
190  'SELECT PERIOD A, TRIGGERED MODE
200  'AND MEASURING TIME 1 S
210  WRT$ = "PER A,TRIG ON,MTIME 1"
220  CALL IBWRT (CNT%,WRT$)
230  'INPUT 10 SAMPLES
240  Z=0
250  FOR I= 1 TO 10
260  CALL IBTRG(CNT%) 'TRIGGER COUNTER
270  CALL IBRD(CNT%,RD$) 'READ RESULT STRING
280  Z = Z + VAL (MID$(RD$,8,13))
290  NEXT I
300  PRINT "AVERAGE: ";Z/10;"S"
310  CALL IBLOC(CNT%) 'GO TO LOCAL
320  END

```

Example of a result:

```

AVERAGE: 9.980422E-06 S
Ok

```

SPECIFICATIONS

Measuring Functions

Frequency A or C

(frequency B via GPIB/IEEE-488 only)

Range

Freq A: 0.1 Hz to 160 MHz (120 MHz to 160 MHz with limited temperature range; typical +23°C ±5°C)

Freq B: 0.1 Hz to 16 MHz (via GPIB/ IEEE-488 only)

Freq C: 70 MHz to 1.3 GHz (optional)

Mode: Reciprocal frequency counting

LSD Displayed: $\frac{2.5 \times 10^{-7} \times \text{FREQ}}{\text{measuring time}}$

Period A

Range: 8 ns to 2×10^8 s

Mode: Single period measurement

(SINGLE) or average period measurement (at 0.2s, 1s or 10s measuring times)

LSD Displayed:

SINGLE period measurement:
 $\frac{100 \text{ ns}}{\text{Time} < 100\text{s}}$

$\frac{5 \times \text{PERIOD}}{10^9 \text{s}}$ (Time > 100s)

Average period measurement:

$\frac{2.5 \times 10^{-7} \times \text{PERIOD}}{\text{measuring time}}$

Ratio A/B

(ratio B/A, C/A or C/B via GPIB/IEEE-488 only)

Range: 1×10^{-7} to 2×10^9 (A/B);
 1×10^{-8} to 2×10^8 (B/A);
0 to 1×10^{15} (A/B SINGLE and B/A SINGLE);
8 to 6×10^{10} (C/A, C/B)

Frequency Range

Input A: 0 MHz to 160 MHz (A/B); 0 MHz to 16 MHz (B/A, C/A, A/B SINGLE) (120 MHz to 160 MHz with limited temperature range; typical +23°C ±5°C)

Input B: 0 MHz to 16 MHz

Input C: 70 MHz to 1.3 GHz

LSD Displayed (Ratio A/B)

$\frac{25}{\text{meas time} \times \text{FREQ B}}$ (0.2, 1, or 10 s measuring times)

LSD Displayed (Ratio B/A)

$\frac{2.5}{\text{meas time} \times \text{FREQ B}}$ (0.2, 1, or 10 s measuring time)

LSD Displayed (Ratio A/B Single, and Ratio B/A Single)

1 $\text{RATIO} < 10^9$

$\frac{5 \times \text{RATIO}}{10^9}$ $\text{RATIO} > 10^9$

LSD Displayed (Ratio C/A or C/B)

$\frac{640}{\text{meas time} \times \text{FREQ A or B}}$

Time Interval A/B

(time interval B-A via GPIB/IEEE-488 only)

Range: 100 ns to 2×10^8 s (SINGLE); 0 ns to 20s(average)

Mode: Single time interval (SINGLE) for time interval measurements (at 0.2s, 1s or 10s measuring times)

LSD Displayed:

SINGLE time interval measurement:

100 ns (Time < 100s)

$$\frac{5 \times \text{TIME}}{10^9 \text{ s}} \quad (\text{Time} > 100\text{s})$$

Average time interval measurements: $\frac{2.5 \times 10^{-7} \text{ s}}{N}$

Averaged Number of Intervals N: measuring time/pulse repetition time

Note: Input signals must be repetitive and asynchronous with respect to the time base

Min Dead Time from Stop to Start: 250 ns

Timing Difference A-B Channels: 4 ns max

Totalize A

(totalize B via GPIB/ IEEE-488 only)

Range: 0 to 1×10^{15} with indication of k or M (kilopulses or Megapulses) the result is truncated if out of display range

Frequency Range: 0 Hz to 12 MHz

Pulse Pair Resolution: 80 ns

LSD Displayed: 1 unit count (counts < 10^9); 5 x counts/ 10^9 (counts $\geq 10^9$)

Gated by B (A) Mode: Event counting on input A (B) during the duration of a pulse on input B (A)

Start/Stop by B (A) Mode: Event counting on input A (B) between two consecutive pulses on input B (A)

Manual Mode: Event counting is controlled by the START/STOP button. Sequential start-stop counts are accumulated. RESET closes the gate and resets the timer/counter to zero.

Volt Max/Min A

(Volt max/min B via GPIB/IEEE-488 only)

Range: -51V to +51V

Frequency Range: DC and 100 Hz to 50 MHz (input A); dc and 100 Hz to 5 MHz (input B)

Resolution: Input signals within $\pm 5\text{V}$, 20 mV; input signals outside $\pm 5\text{V}$, 200 mV

Inaccuracy

DC and 100 Hz to 12 MHz (A), or to 1MHz (B): Input signals within $\pm 5\text{V}$, 30 mV $\pm 1\%$ of reading $\pm 3\%$ of Vp-p; input signals outside $\pm 5\text{V}$, 300 mV $\pm 3\%$ of reading $\pm 3\%$ of Vp-p

Inaccuracy 12 MHz to 50 MHz (A) or 1MHz to 5 MHz (B):

Input signals within $\pm 5\text{V}$, 30 mV $\pm 10\%$ of reading $\pm 10\%$ of Vp-p; input signals outside $\pm 5\text{V}$, 300 mV $\pm 10\%$ of reacting $\pm 10\%$ of Vp-p

Input-A and Input-B**Frequency Range**

DC-Coupled: DC to 160 MHz (120 MHz to 160 MHz with limited temperature range; typical $+23^\circ\text{C} \pm 5^\circ\text{C}$)

AC-Coupled: 20 Hz to 160 MHz (120 MHz to 160 MHz with limited temperature range; typical $+23^\circ\text{C} \pm 5^\circ\text{C}$)

Minimum Pulse Duration: 4 ns

Coupling: AC or dc

Impedance: 1M Ω /35 pF

Channel Input: Separate A and B, or common via A

Maximum Voltage Without Damage: 350V (dc + ac peak) between 0Hz and 440 Hz, falling to 8V rms at 1MHz

Sensitivity. DC-Coupled

Sine: 20 mVrms, 0Hz to 30 MHz; 40 mVrms, 30 MHz to 120 MHz, 60 mVrms typ., 120 MHz to 160 MHz (at room temperature)

Pulse: 60 mVp-p, 0Hz to 30 MHz; 110 mVp-p, 30 Hz to 120 MHz; sensitivity decreases to 60 mVrms at 160 MHz typically

Sensitivity, AC-Coupled Sensitivity is selectable in 6 steps: 20 mV, 50 mV, 100 mV, 200 mV, 500 mV and 1Vrms (sine) nominal

Maximum Sensitivity: 20 mVrms, 20 Hz to 30 MHz; 40 mVrms, 30 MHz to 120 MHz; sensitivity decreases to 60 mVrms typ., 120 MHz to 160 MHz (at room temperature)

Attenuation: x1 or x10, switch selectable or AUTO

Trigger Slopes: Positive or negative

Trigger Level Range

DC-Coupled: -51V to +51V, adjustable via up/down control

AC-Coupled: 0V fixed or AUTO level

Trigger Level Resolution: 20 mV, signals within $\pm 5\text{V}$; 200 mV, signals outside $\pm 5\text{V}$

Trigger Level Setting Accuracy: $\pm 10\text{mV} \pm 1\%$ of setting

AUTO Trigger Level: Trigger Level on input A (and B when required) is automatically set to 50% of input signal amplitude.

Frequency Range: 100 Hz to 160 MHz (120 MHz to 160 MHz with limited temperature range; typical $+23^\circ\text{C} \pm 5^\circ\text{C}$)

Sensitivity: 150 mVpp

Trigger Indicators: Tri-state LED indicators;
On: Signal above set trigger level.

Off: Signal below set trigger level.
Blinking: Triggering occurs.

Input Channel Selection: Separate A and B,
or A and B common via input-A.

Input C (Option PM 9608B)

Frequency Range: 70 MHz to 1.3 GHz

Coupling: AC

Operating Input Voltage Range: 10 mVrms to 12Vrms, 70 MHz to 900 MHz; 15 mVrms to 12Vrms, 900 MHz to 1100 MHz; 40 mVrms to 12Vrms, 1100 MHz to 1300 MHz

AM Tolerance: 94% at max 100 kHz modulation frequency; minimum signal must exceed minimum operating input voltage requirement

Input Impedance: 50Ω nominal, VSWR :1

Max Voltage Without Damage: 12V rms, overload protection with pin diodes

External Reference Input D

Input Frequency: 10 MHz ± 0.1 MHz

Coupling: AC

Sensitivity: 500 mV rms

Input Impedance: Approx 300Ω at 10 MHz

Maximum Input Voltage: 15Vrms

Auxiliary Functions

Power On/off

Switches counter power on/off. At power up a self-test is made and the counter is set to default settings.

Default Settings

Function: FREQ A

Measuring-Time: 0.2 s

Coupling: AC on Input-A, DC on Input-B

Trigger level: Auto

Trigger slope: Positive on A and B.

RESET The RESET button has three functions:

RESET: Starts a new measurement. The settings are not changed.

LOCAL:

Makes the counter go to LOCAL operation, when in remote operation (unless Local Lock-Out is programmed).

START/STOP: Opens/closes the gate in TOTALIZE A, manual mode.

Measuring Time A measuring time of 0.2s, 1s, 10s or SINGLE can be selected

NOTE: When SINGLE is selected together with PERIOD, RATIO or TIME, the result is a single cycle measurement, but SINGLE together with FREQUENCY results in a fixed 3 ms Measuring-time.

Measuring rate: Approx. 5 measurements/s. Approx. 2 measurements/s when AUTO trigger level is switched on.

Display time: Normally the display time equals the set Measuring-time. When SINGLE is selected, a display time of 0.1 seconds is used.

Display Hold The current measuring result is frozen on the display. A new measurement starts when the RESET button is pressed.

Definitions

LSD Displayed

LSD = unit value of the least significant digit displayed. All calculated LSDs (see Measuring Functions section) should be rounded to the nearest decade (e.g., 0.3 Hz is rounded to 0.1 Hz and 5 Hz to 10 Hz) and cannot exceed the 9th digit.

Resolution

Resolution = smallest increment between two measuring results on the display, due to the ±1 count error.

Freq A, Freq C, Period A:

Resolution can be 1 LSD or 2 LSD if:

$$\frac{\text{LSD} \times \text{measuring time}}{\text{FREQ or PERIOD}} < 10^{-7}$$

the resolution is 2 LSD units (30% probability). Otherwise resolution is 1 LSD unit (70% probability).

Ratio A/B:

Resolution can be 1 LSD or 2 LSD. If:

$$\frac{\text{LSD} \times \text{measuring time}}{\text{RATIO}} < \frac{10}{\text{FREQ A}}$$

the resolution is 2 LSD units (30% probability). Otherwise resolution is 1 LSD unit (70% probability).

SINGLE Period A and SINGLE Ratio A/B: Resolution equals 1 LSD unit

Time A-B: Resolution (95% confidence level) equals 1 LSD unit or 100 ns/N, whichever is greater

Inaccuracy

Inaccuracy, i.e., the relative error, depends on the following factors:

resolution

$$\pm \frac{FREQ, PERIOD, RATIO, \text{ or } TIME}{\text{relative trigger error}}$$

\pm relative time base error

\pm relative systematic error

Relative Trigger Error

Freq A, Period A:

$$\pm \frac{\text{noise voltage } A(V_p - p)}{\text{signal slope } A(V/s) \times \text{meas time}}$$

Ratio A/B:

$$\pm \frac{\text{noise voltage } B(V_p - p)}{\text{signal slope } B(V/s) \times \text{meas time}}$$

Totalize A, Gated or Start/Stop by B:

$$\pm \frac{\text{noise voltage } B(V_p - p)}{\text{signal slope } B(V/s) \times \text{gate time } B}$$

Time A-B:

$$\pm \frac{\text{noise voltage } A(V_p - p)}{\text{signal slope } A(V/s) \times TIME \times \sqrt{N}}$$

$$\pm \frac{\text{noise voltage } B(V_p - p)}{\text{signal slope } B(V/s) \times TIME \times \sqrt{N}}$$

Relative Time Base Error:

$$\pm \frac{\text{deviation from 10 MHz}}{10 \text{ MHz}}$$

Relative Time A-B Systematic Error: Inaccuracy caused by timing difference between A and B channels
 $< \pm 4 \text{ ns/TIME}$

General Specifications

Power Requirements

Line Voltage: 115V or 230Vrms $\pm 15\%$; 45 Hz to 440 Hz; 20 VA PM 6666 including all options

Safety: In accordance with IEC 348 Class 1 and CSA 556B, CE

Line Interference: Below VDE 0871 B and MIL STD 461, CE

Battery Unit: See PM 9605 option

Time Base (Crystal oscillator)

Stability Against	Oscillator Version	
	Standard	MTCXO
Aging		
Per Month	$< 5 \times 10^{-7}$ (5Hz)	$< 1 \times 10^{-7}$ (1Hz)
Per Year	$< 5 \times 10^{-6}$ (50Hz)	$< 5 \times 10^{-7}$ (5Hz)
Temperature Changes		
0°C to 50°C	$< 1 \times 10^{-5}$ (100Hz)	$< 2 \times 10^{-7}$ (2Hz)
Line Voltage Changes 10%	$< 1 \times 10^{-8}$ (0.1Hz)	$< 1 \times 10^{-9}$ (0.01Hz)

Display

Readout: 9-digit LCD with unit and cursor indication

Unit Indication: MHz, kHz, Hz, mHz, ks, s, ms, μ s, ns, M, k, m, μ and n.

GATE Indicator: Indicates that the counter is measuring

REMOTE Indicator: Indicates when the counter is remotely controlled via an installed GPIB/IEEE-488 interface (PM 9604)

Cursor: Indicates selected measuring function, selected Measuring-time, input triggering, display hold and whether an external reference frequency is in use.

Environmental Data

Temperature

Operating: 0°C to +50°

Storage: -40°C to +70°

Altitude

Operating: 5000m (53.3 kN/m²)

Storage: 15,000m (15.2 kN/m²)

Humidity

Operating: 10% to 90% RH, no condensation

Storage: 5% to 95% RH

Vibration Test: According to IEC 68Fc

Bump Test: According to IEC 68Eb

Handling Test: According to IEC 68Ec

Mechanical Data

Size: 186 mm W x 88 mm H x 270 mm L (7.3 in W x 3.5 in H x 10.6 in L)

Weight: 2.1 kg (4.6 lb)

Optional Accessories

GPIO/IEEE-488 Interface, PM 9604

Mounting: Inside counter cabinet

Interface Functions: SH1, AH1, T5, L4, SR1, RL1, DC1, DT1, E2


Address Setting: Switch selectable at rear panel between 0 and 30. Factory preset at 10.

Programmable Device Functions:

Measuring functions
Measuring-time
Trig level offset selection
Trigger slope
Manual Totalize gate control
Output separator selection
Device clear
Device trigger
High-speed dump
MTCXO on/off
Short output format
Free run/Triggered measurements
Set SRQ-mask
Program data out queries
Device identity query

Programming Code Format: 7-bit ISO code (ASCII) characters. Both upper and lower case characters are accepted.

Output Format

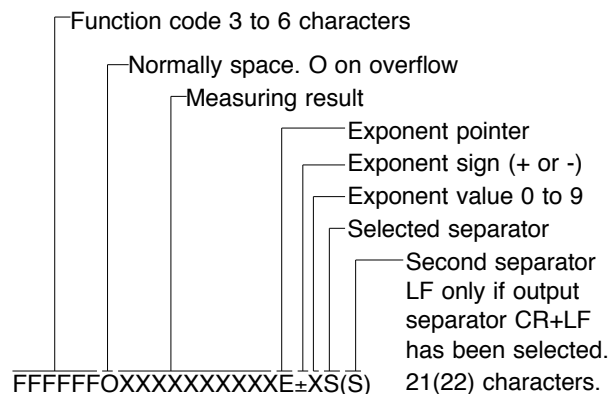

When you select 'Short output format' FFFFFFFF and leading zeroes are omitted.

Output Data Separator: Default separator at power-on is LF. The separator can be programmed to be any non printable ASCII-code with decimal equivalent 0-31, except 27 (ESC).

In addition the combination 13+10 (CR+LF) can be programmed. The EOI-line can be programmed to be active together with the last output byte sent.

Input Separator: The counter accepts the following characters as separators: ETX, ETB, CR, LF, ' '(space), ',' (comma), ':' (colon), ';' (semicolon).

High-Speed Dump: The contents of the counting registers are transferred to the controller, without being processed by the counter. The processing must be done in the controller instead.

The output format is FMXXXXXXXXXS(S) where F is calculation formula, M is multiplier, X..X = 12 hex-digits representing the register contents, and S(S) is the set output separator.

Ranges: Same as for normal operation, with the following exceptions:

Frequency; Max measuring time: 1 s
Period, average; Max measuring time: 1.4 s
Time interval, average; 0 ns to 1.6 s
Max measuring time: 4 s
Ratio A/B: 0 and 6×10^{-7} to 1.6×10^8
Ratio B/A: 0 and 6×10^{-8} to 1.6×10^7
Ratio C/A, C/B: 8 to 4×10^9

Max Data Output Rate

Normal Mode: Approx 5 readings/s

High-Speed Dump: Approx 100 readings/s. The highest output rate is obtained at SINGLE measuring time.

Output Time for Measuring Data

Normal Mode: Approx 9 ms (20 bytes)

High-Speed Mode: Approx 4 ms (15 bytes)

Response Time for Addressing: Approx 600 μ s

Response Time for Trigger Command (GET):

Normal operation: Approx. 10 ms

High-speed dump: Approx. 2 ms

Response Time for Serial Poll: Approx. 1.5 ms

Input Buffer Size: 28 bytes

Typical Read Time for Programming Data: Approx 1ms/byte (unless input buffer is full)

Battery Unit PM 9605

The PM 9605 is a rechargeable battery unit for mounting inside the counter. The unit contains a standard 6V sealed lead-acid battery and an automatic battery charger.

Battery Capacity (20°C): Approx 15 Wh

Operating Time When Battery Powered: Approx 2 hours of continuous operation

Recharging Time: 7 hours to approx 75% of full capacity

Battery Protection: Overcharge protection and deep discharge (auto shut-off) protection

Temperature

Operating: 0°C to +40°C

Storage: -40°C to +50°C

Weight: 0.8 kg (1.8 lb)

Rack Mounting Adapter, PM 9606/01

The PM 9606/01 is a 19" wide Rack Mounting Adapter. It can host one PM 6662, PM 6665, PM 6666 or PM 6669 Counter only.

Rack Mounting Adapter, PM 9606/02

The PM 9606/02 is a 19" wide Rack Mounting Adapter. It can host one PM 6662, PM 6665, PM 6666 or PM 6669 Counter together with a second instrument. That second instrument can be a Philips PM 2534 to 35 or a FLUKE 8840 Digital Multimeter, or another PM 666X counter.

High stability time-base PM 9607

See specifications for optional MTCXO time-base.

HF-input PM 9608B

See specifications for optional Input-C.

Carrying Case PM 9609

The PM 9609 is a leather-like carrying case, for protection of the counter during transportation.

Ordering Information**Models**

PM 6666 Timer/Counter

Included with the Instrument

One-year product warranty, line cord, operator manual, and Certificate of Calibration Practices.

Optional Configurations

When ordering, select basic "PM" Model desired from above, plus construct a 3-digit/suffix by selecting 1-digit in each suffix column to identify Input Frequency, Reference Oscillator, and Interface.

Input Frequency Option

/0 - - Standard 160 MHz

/4 - - 1.3 GHz (PM 9608B/00)

Reference Oscillator Option

/- 1 - Standard

/- 3 - MTCXO (PM 9607/00)

Interface Option

/- - 1 Standard line voltage, non GPIB/ IEEE-488

/- - 3 Battery (PM 9605/00)

/- - 6 GPIB/IEEE-488 (PM 9604/00)

Example, Ordering Configuring

To order the PM 6666 with standard 160 MHz input, MTCXO Oscillator, and standard interface, select:

ConfigurationPM 6666

Option Suffix - Input/ 0 - -
 Oscillator/ - 3 -
 Interface/ - - 1

Yields Complete Model Number

PM 6666/031

Options and Accessories

PM 9581/011 50Ω Termination 3W

PM 9585/011 50Ω Termination 1W

PM 9604/001 GPIB Interface

PM 9605/001 Battery Unit

PM 9606/011 Rack Kit for PM 6666

PM 9606/021 Rack Kit for 2 Counters or Rack Kit for PM 6666 and 8840A/42A, PM 2525/34/35 DMMs

PM 9607/001 MTCXO Time Base

PM 9608B/001 1.3 GHz HF-Input

PM 9609/001 Carrying Case

All options can be field installed by the user.

*The GPIB interface PM 9604 and the battery unit PM 9605 cannot be installed together in a PM 6666 counter.

Manuals

4822 872 20017	Operators' Manual
4822 872 20018	Operators' Manual (German)
4822 872 20019	Operators' Manual (French)
4822 872 25007	Service Manual
4822 872 20016	GPIB Pocket Guide

Customer Support Services**Factory Warranty**

One-year product warranty.

APPENDIX 1

Checking the Sensitivity of Counters

Introduction

The sensitivity of a counter is normally specified as the minimum signal voltage on which the input of the counter will trigger correctly.

When you use a signal-source with an output-impedance of 50Ω , constant-output-amplitude, and the counter has a 50Ω input-impedance, the input signal of the counter is in theory independent of the cable length. However, if the input impedance deviates from 50Ω there will be standing wave reflections which will cause changes in the amplitude of the signal between the signal-source and the counter input.

Two factors determine the magnitude of the changes, i.e. frequency and capacitive load.

EXAMPLE: For a $1\text{ M}\Omega/35\text{ pF}$ input, the 35 pF parallel capacitance is approximately equal to a 50Ω capacitive load at 100 MHz .

Consequently, it is of the utmost importance to know how sensitivity is measured.

Recommended Instruments

- Signal-source with a 50Ω output impedance.
- $>350\text{ MHz}$ oscilloscope with a 50Ω input impedance.
- BNC T-piece.
- Two BNC-cables, one short and one long.

High Impedance Inputs ($1\text{ M}\Omega$)

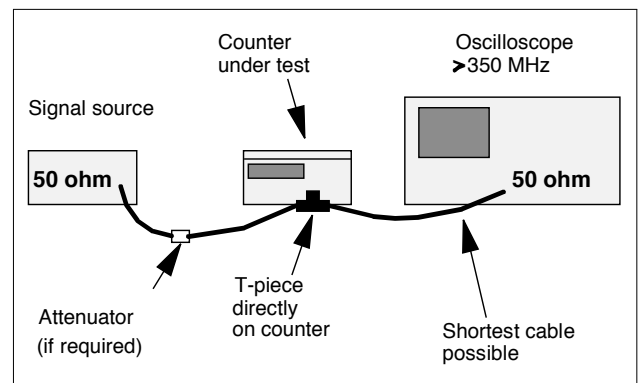


Figure 9. Connect the instruments like this.

Preparations

Connect the instruments as illustrated in the figure above. Turn off AUTO and set the counter to maximum sensitivity.

Method 1

- Adjust the amplitude of the signal-source to the minimum level accepted by the counter.
- Read the amplitude on the oscilloscope.
- Check that the reading is the same as, or less than, the sensitivity level in the counter specifications.

Method 2

- Adjust the amplitude of the signal-source until the oscilloscope indicates the sensitivity limit in the counter specifications.
- Check that the counter is operating correctly.

Low Impedance Inputs (50Ω)

If You Have a Calibrated Signal Source

- Adjust the signal-source to the sensitivity limit of the counter.
- Connect it directly to the input of the counter.
- Check that the counter is operating correctly.

If You Don't Have a Calibrated Signal Source

Use either of the following methods

Method 1

- Connect the output of the signal-source directly to the input of the counter.
- Turn off AUTO and Set the counter to maximum sensitivity (if adjustable).
- Adjust the amplitude of the signal-source to the minimum level accepted by the counter.

- Disconnect the cable from the counter and connect it to the oscilloscope.
- Read the amplitude on the oscilloscope.
- Check that the reading is the same as, or less than, the sensitivity level in the counter specifications.

Method 2

- Connect the signal-source to the oscilloscope.
- Adjust the output amplitude of the signal-source until the oscilloscope indicates the sensitivity limit in the counter specifications.
- Disconnect the cable from the oscilloscope and connect it to the counter.
- Turn off AUTO and set the counter to maximum sensitivity (if adjustable).
- Check that the counter is operating correctly.

These procedures ensure unambiguous measurements of the signal voltage at the input of the counter.

INDEX

A		
Abnormal bit		
SEE Status byte		
AC		
Selecting	18	
AC coupling selection buttons.		
Location	6	
Address	24	
Attenuator		
From GPIB	27	
GPIB code.....	18	
Operating	18	
x1	18	
x10	18	
Attenuator buttons		
Location	6	
Auto level		
From GPIB	27	
Auto level button		
Location	6	
Auto On/Off		
GPIB code.....	18	
Selection	18	
B		
Battery unit		
Operation	22	
Preventive maintenance.....	22	
Storage	22	
Bus commands		
Summary	33	
Bus drivers	24	
Bus learn		
GPIB	32	
C		
Caution statements	4	
Check list		
GPIB program	25	
Checking		
GPIB communication	24	
COM B via A button		
Location	6	
Common		
From GPIB.....	27	
GPIB code	20	
Operation.....	20	
Control function.....	23	
Controller		
Connecting GPIB.....	24	
Controls		
operation.....	10	
Coupling		
From GPIB.....	27	
GPIB code	18	
Selecting.....	18	
Cover removal.....	8	
D		
DC		
Selecting.....	18	
Delimiters		
SEE Separators		
Device clear	24	
Device Trigger	24	
Display hold		
Operating the button.....	16	
Display-hold button		
Location.....	6	
E		
Earthing		
SEE Grounding		
EOI mode		
SEE Output separator		
Error codes	11,22	
External reference		
Connection	8	
Description of function.....	21	
Location of connector	5	
External reference input		
Connection	20	
F		
Free run		
From GPIB.....	28	
Frequency A		
From GPIB	26	
GPIB code.....	10	
Selecting	10	
Frequency B		
From GPIB	26	
Selecting	10	
Frequency C		
From GPIB	26	
GPIB code.....	12	
Selecting	12	
Function		
GPIB code.....	10	
Selecting	10	
Function selection		
GPIB.....	26	
Function-selector button		
Location	6	
G		
Get		
SEE Triggered		
GPIB address-selector		
Location	5	
GPIB interface-connector		
Location	5	
GPIB-INTERFACE		
OPERATION.....	23 - 36	
Grounding.....	8	
H		
High speed dump		
GPIB.....	31	
Hold		
display	16	
HP controller		
GPIB example	34	
I		
IBM GPIB		
GPIB example	36	
ID?		
GPIB.....	24	

Identity of the counter	24	P	From GPIB.....	27
Input A		Parallel poll	GPIB code	18
Operation	16	Period	Operation.....	18
Input B		From GPIB.....	SEE Trigger slope	
Operation	16	Period A	Slope selection buttons	
Input C		GPIB code	Location	6
Operation	20	Selecting.....	Source and Acceptor	
Input separator		PM 2201	Handshake	23
GPIB	25	GPIB example	SPECIFICATIONS	37 - 42
Input settings		Power switch	Start/Stop Totalize	
From GPIB.....	27	Location	From GPIB.....	27
Input-A BNC-connector		Operating.....	Operation.....	16
Location	6	Power-inlet socket	Starting a new measurement	
Input-B BNC-connector		Location of.....	SEE Reset	
Location	6	PRODUCT PRESENTATION ..	Status byte	
Input-C BNC-connector		5 - 6	GPIB.....	29
Location	6	Programming check-list.....	Symbols	4
INSTALLATION	7 - 9	Q	T	
Installing options	8	Queries	Talk only switch	24
L		GPIB	Talker function	23
LCD-display		R	Tilting support	6
Location	6	Ratio A/B	Time interval A-B	
Listener function.....	23	From GPIB.....	GPIB code	12
Local	16	GPIB code	Selecting.....	12
DC coupling selection buttons	6	Selecting.....	Time interval A/B	
M		Read level	From GPIB.....	26
Measuring		GPIB code	Time out	
Frequency A	10	Read level button	GPIB	28
Frequency C	12	Location	Totalize A	
Period	12	Rear feet	Description of function.....	13
Ratio A/B	12	Remote/local.....	From GPIB.....	26
Time interval A-B	12	Removing the cover	GPIB code	12
Time selection	14	Reset	Selecting.....	12
Totalize.....	12	Description of function	Trigger indicators	
Voltage.....	14	Operating the button.....	Location	6
Measuring time		Reset button	Trigger level	
From GPIB.....	27	Location	From GPIB.....	27
GPIB code	14	S	GPIB code	18
Selecting.....	14	Safety	Trigger slope	
Measuring-time selector-button		Screws for removing the cover.....	From GPIB.....	27
Location	6	Selecting function	Triggered mode	
MTCXO		via GPIB	From GPIB.....	28
Calibration	8	Sensitivity	U	
N		From GPIB.....	Unpacking	7
Normal output format		GPIB code	V	
GPIB	30	Separators	Volt max/min	
O		Input	From GPIB.....	26
OPERATING		Output.....	GPIB code	14
INSTRUCTIONS	10 - 22	Service request.....	Selecting.....	14
Operating the controls.....	10	GPIB	Voltage-range	
Options		Set value	Location of.....	5
Installation	8	Description of function	Selecting.....	7
Output mode		Operation.....	W	
GPIB	30	Set value button	Warning statements	4
Output separator		Location		
GPIB	26	Short output format		
		GPIB		
		Slope		